Supplementary Manual



Suzuki GSX-S1000 2017-2019 (XT-S01)

Remove the main and the passanger seat.



Remove the side covers from the fuel tank.



Remove the side fairing covers.



Supplementary Manual



Suzuki GSX-S1000 2017-2019 (XT-S01)

Remove the cover from the front of the fuel tank.



Remove the ignition switch cover.



Remove the fuel tank.



Supplementary Manual



Suzuki GSX-S1000 2017-2019 (XT-S01)

Plug the X-TRE connectors in-line with the gear position sensor connectors.

(White, 3-pole triangular connectors below the fuel tank at the left side)




Mount the X-TRE box to the inner side of the frame by the supplied Velcro strips, and secure the box and cables with cable ties.



Cut the Black/Green wire about 4cm (1.6") away from the ECM connector.

(Black connector, PIN #14)

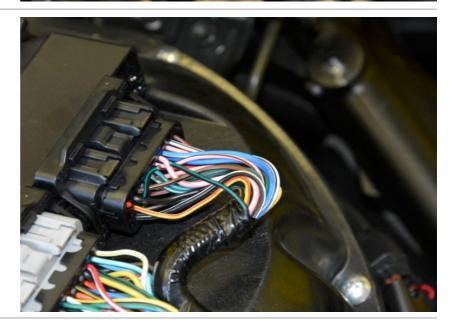


Supplementary Manual



Suzuki GSX-S1000 2017-2019 (XT-S01)

Connect the X-TRE Black/Green wire to the Black/Green wire end, which goes to the ECU/ECM connector.

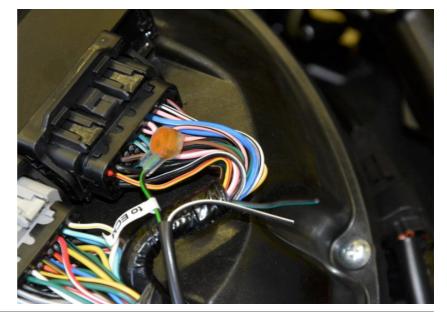

Connect the X-TRE Black/White wire to the Black/Green wire end, which is at the wiring harness side.



Connect the X-TRE Red wire to the Orange wire of rear brake light switch connector.

(Transparent, 2-pole connector below the fuel tank)

(X-TRE mode: 4)

