SpeedoHealer
Supplementary Manual

MV Agusta Brutale 1078 2008- (SH-V4 + SH-D01)

Remove the seat.

Remove the black frame cover at the left side below the fuel tank.

Plug the SpeedoHealer connectors in-line with the vehicle speed sensor connectors.

(Black, 3-pole connectors at the left side next to the stand switch)

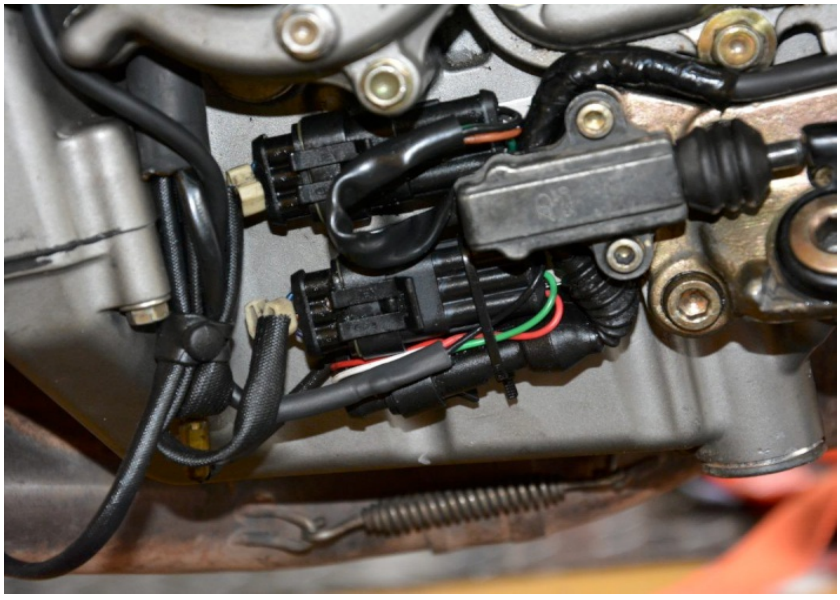

Typical position for the SpeedoHealer.

Secure the unit properly.