

# Advanced Rider Assistant Supplementary Manual



## Royal Enfield Himalayan ABS 2020- (ARA-1 + ARA-K2D)

Secure the bike on a stand.



Remove the seats.


Remove the side covers from the airbox.

Remove the fuel tank.



Plug the ARA connectors in-line with the ignition coil connectors.

*(Make sure the ARA plugs marked with RED square are connected, and leave the unmarked coupler unused. You may connect the male and female plugs of the unused pair together or isolate with tape.)*

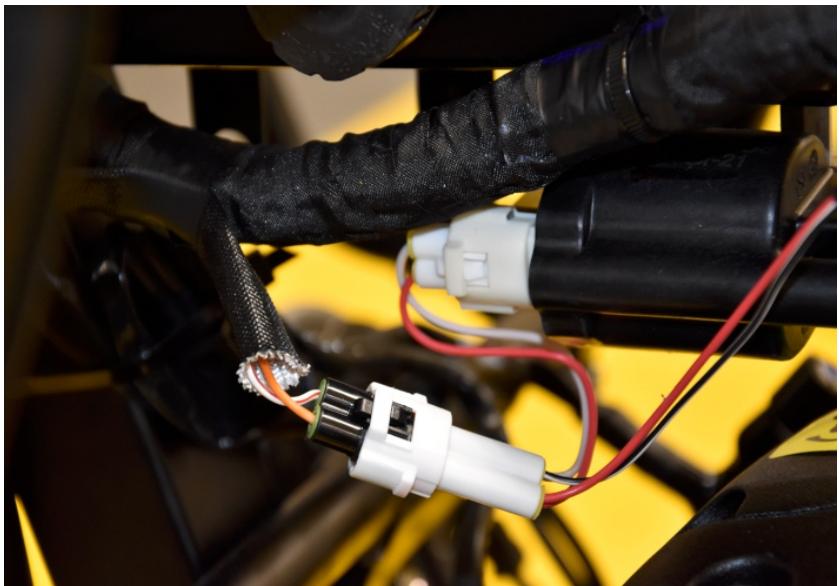


# Advanced Rider Assistant Supplementary Manual




## Royal Enfield Himalayan ABS 2020- (ARA-1 + ARA-K2D)


Connect the ARA Black wire terminal to the battery negative terminal.

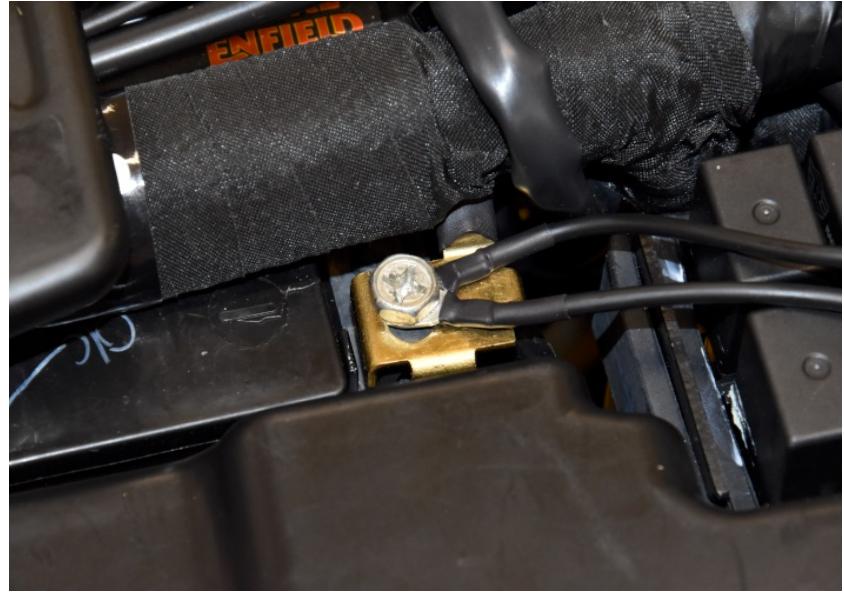

Locate the black ABS module connector under the airbox.

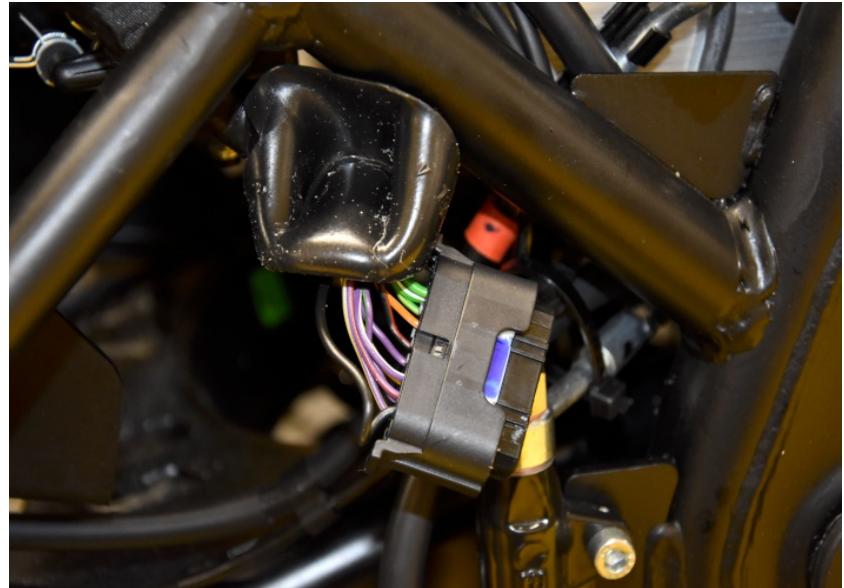

Splice the ARA Green wire to the Purple/Yellow wire of the ABS connector.

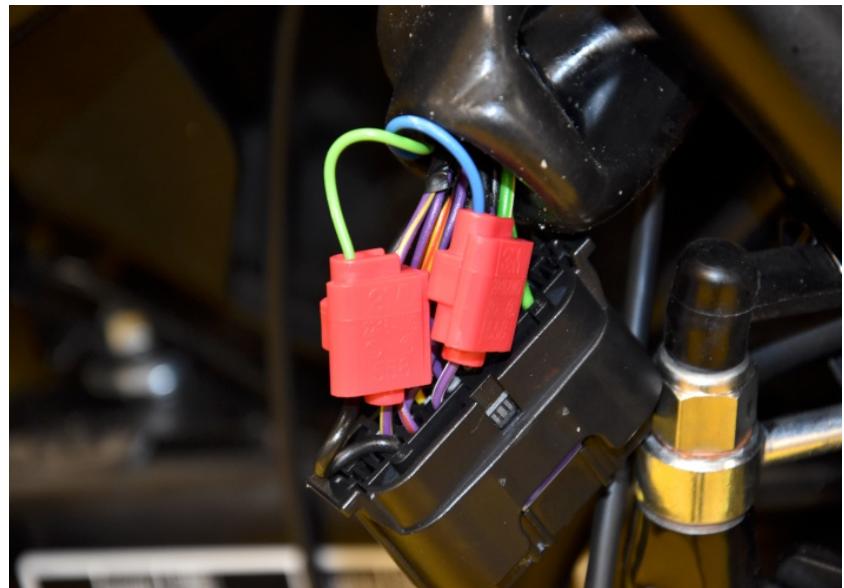

Splice the ARA Blue wire to the Purple/White wire of the ABS connector.

# Advanced Rider Assistant Supplementary Manual



## Royal Enfield Himalayan ABS 2020- (ARA-1 + ARA-K2D)

Mount the switch onto the handlebar.



Mount the LED indicator on the dashboard.



Typical position for the ARA module.

