

SWM Superdual ABS 2018-2019 (ARA-1 + ARA-K2D)

Secure the bike on a stand.




Remove the seat and the side fairings.

Remove the fuel tank.



Locate the ignition coil connector.


(Blue, 2-pole connectors under the fuel tank)

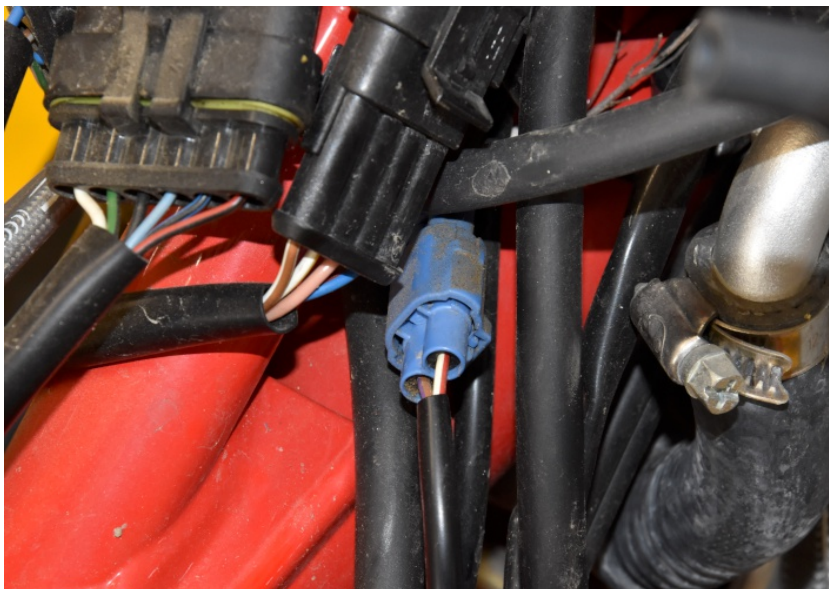


SWM Superdual ABS 2018-2019 (ARA-1 + ARA-K2D)

Plug the ARA connector in-line with the ignition coil connector.


(Make sure the ARA plugs marked with RED square are connected, and leave the other one coupler unused)

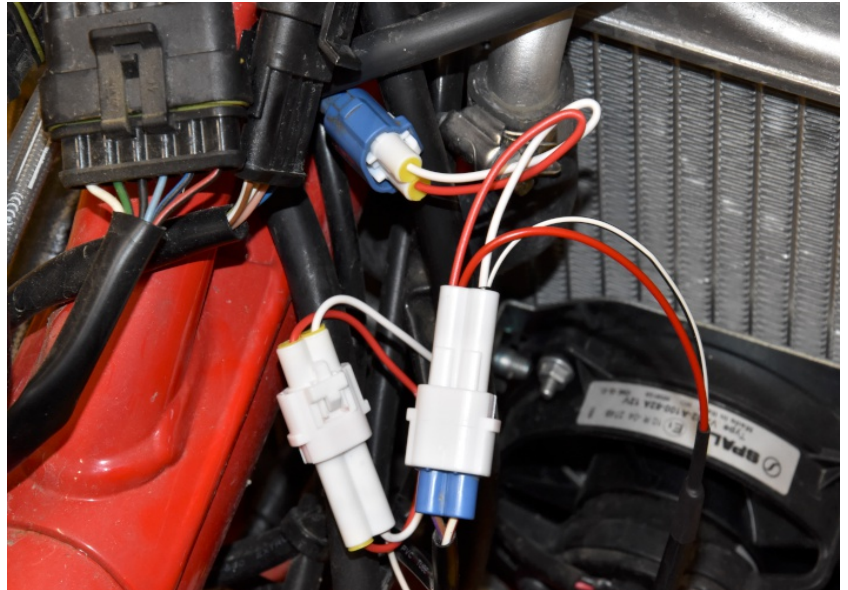

Connect the ARA Black wire terminal to the battery negative terminal.

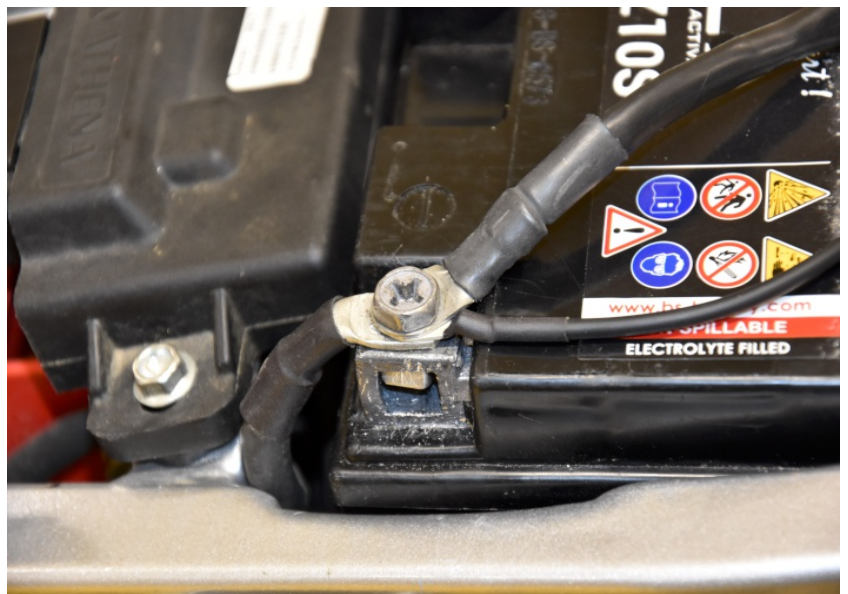


Locate the Black ABS module connector under the seat.

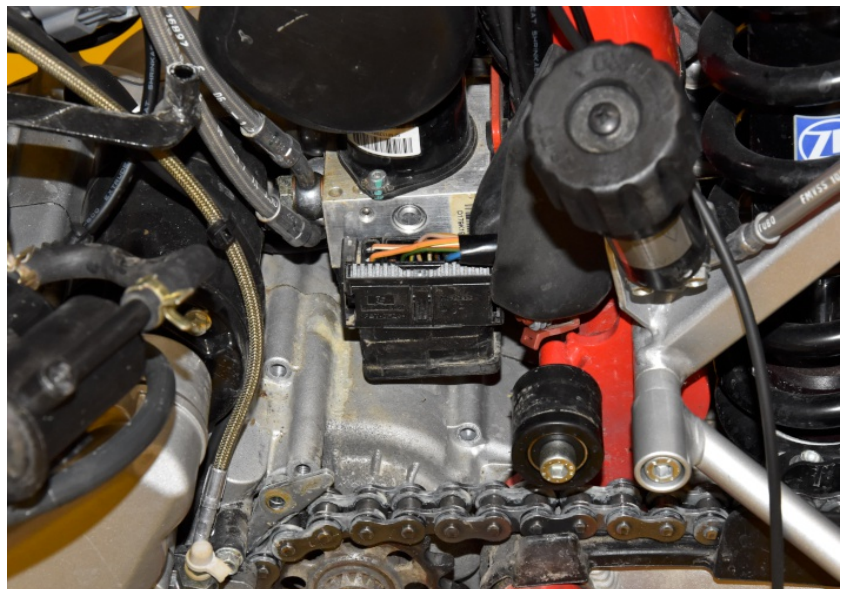

SWM Superdual ABS 2018-2019 (ARA-1 + ARA-K2D)

Splice the ARA Green wire to the
Yellow/Blue wire of the ABS connector.


Splice the ARA Blue wire to the
Yellow/White wire of the ABS connector.

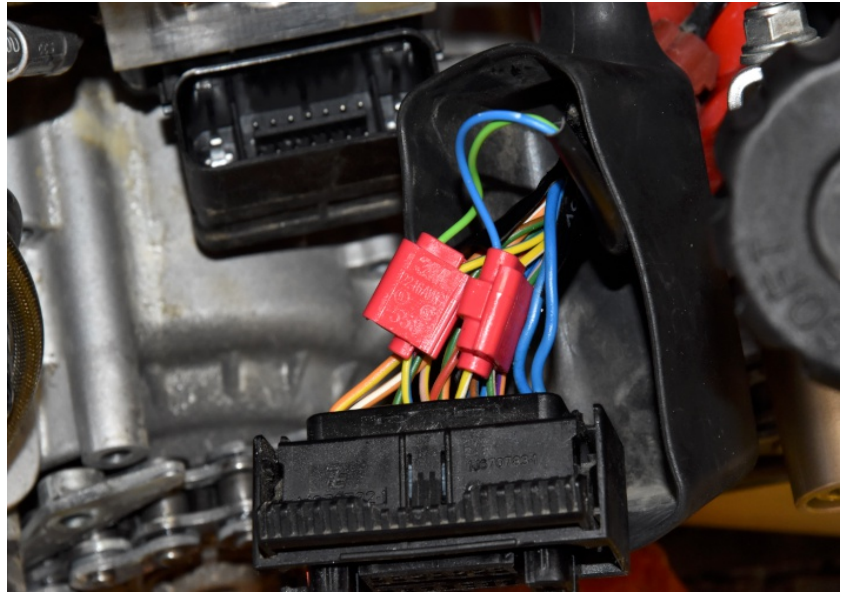

Mount the switch onto the handlebar.



Mount the LED indicator on the
dashboard.

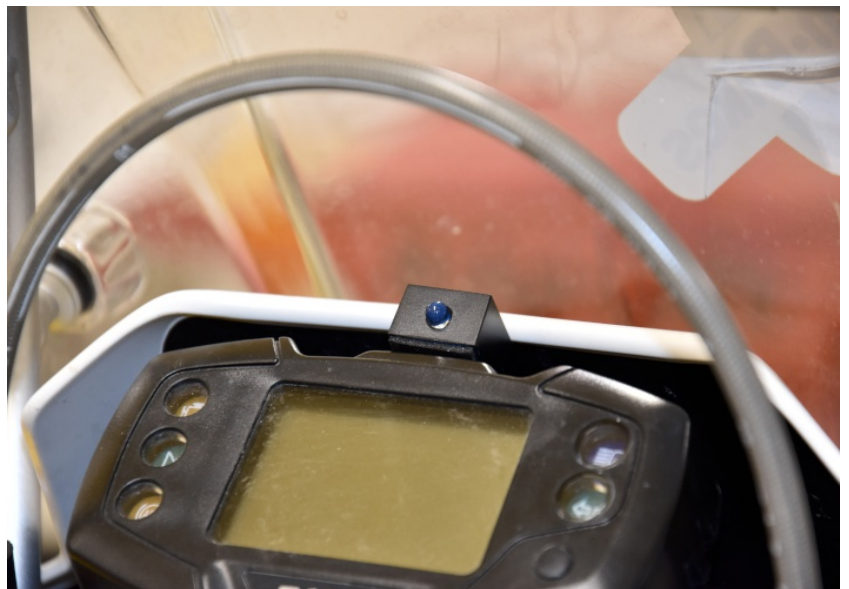

SWM Superdual ABS 2018-2019 (ARA-1 + ARA-K2D)

Typical position for the ARA module.

Secure the unit properly.

