

## Honda ST1300 ABS Pan European 2002-2016 (ARA-1 + ARA-K2T)

Secure the bike on a stand.



Remove the seat.

Lift up or remove the fuel tank.



Locate the ignition coil connectors on the left side under the side fairing.

Take off the Yellow/Blue terminal from the coil.

Plug the ARA White connectors in-line with the ignition coil terminals.



# Advanced Rider Assistant Supplementary Manual



## Honda ST1300 ABS Pan European 2002-2016 (ARA-1 + ARA-K2T)


Locate the other ignition coil connectors on the right side under the side fairing.

Take off the Black/White terminal from the coil.

Plug the ARA Red connectors in-line with the ignition coil terminals.

Take off the Blue/Yellow terminal from the coil.

Plug the ARA White connectors in-line with the ignition coil terminals.

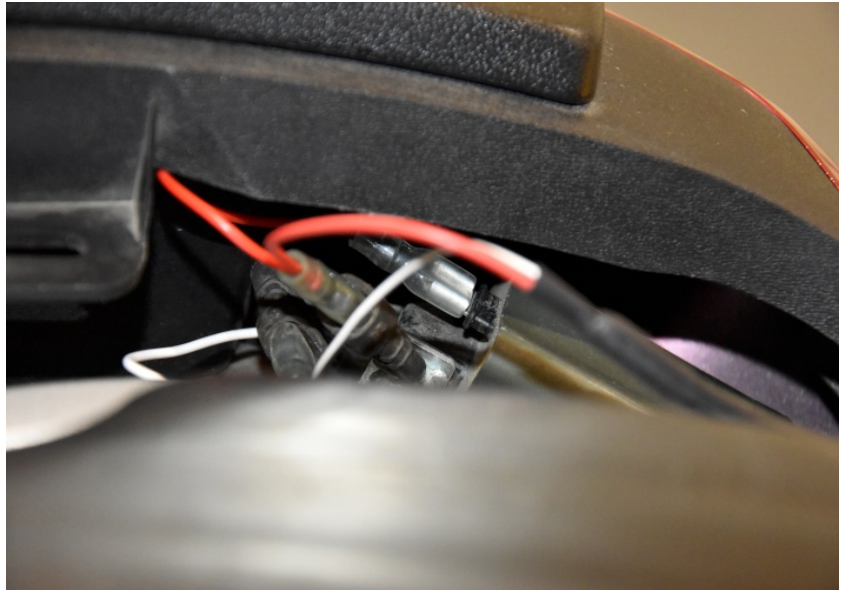

Connect the ARA Black wire terminal to the battery negative terminal.



Locate the Black ABS module connector under the tail fairing.


Splice the ARA Green wire to the Blue/Brown wire of the ABS connector.

Splice the ARA Blue wire to the Green/Orange wire of the ABS connector.



## Honda ST1300 ABS Pan European 2002-2016 (ARA-1 + ARA-K2T)

Mount the switch onto the handlebar.

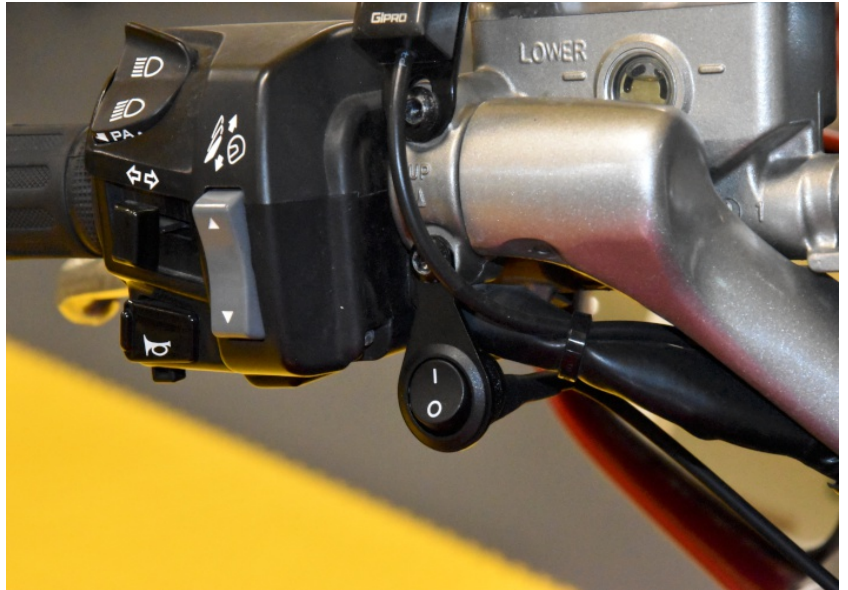

Mount the LED indicator.



Typical position for the ARA module.

Secure the unit properly.

