

Brake Light Pro Supplementary Manual



Honda CB900F Hornet 2002-2008 (BLP-U01)

Secure the bike on a stand.



Remove the seat and the tail fairing.

Locate the rear light assembly connector.

(Transparent, 3-pole connector)




Connect the BLP Black wire to the Green wire.

Cut the Green/Yellow wire.

Connect the BLP Red wire to the Green/Yellow wire end, which goes to the bike's main wiring harness.

Connect the BLP Green wire to the Green/Yellow wire end, which goes to the rear light assembly.

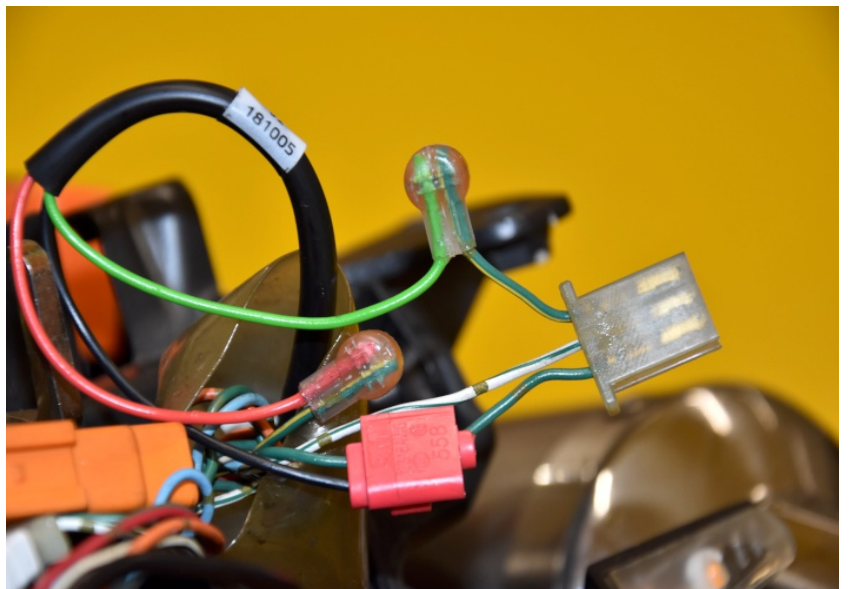

Brake Light Pro Supplementary Manual



Honda CB900F Hornet 2002-2008 (BLP-U01)

Typical position for the Brake Light Pro.

Secure the unit properly.

