

# Brake Light Pro Supplementary Manual



## Honda CBF1000 F ABS 2010-2016 (BLP-U01)

Secure the bike on a stand.



Remove the rear seat and the plastic cover of the rear light.

Locate the White 3-pole rear light connector.



Cut the Black/Yellow wire.

Connect the BLP Red wire to the Black/Yellow wire end, which goes to the bike's main wiring harness.

Connect the BLP Green wire to the Black/Yellow wire end, which goes to the rear light assembly.




# Brake Light Pro Supplementary Manual



## Honda CBF1000 F ABS 2010-2016 (BLP-U01)

Connect the BLP Black wire to the Black wire.

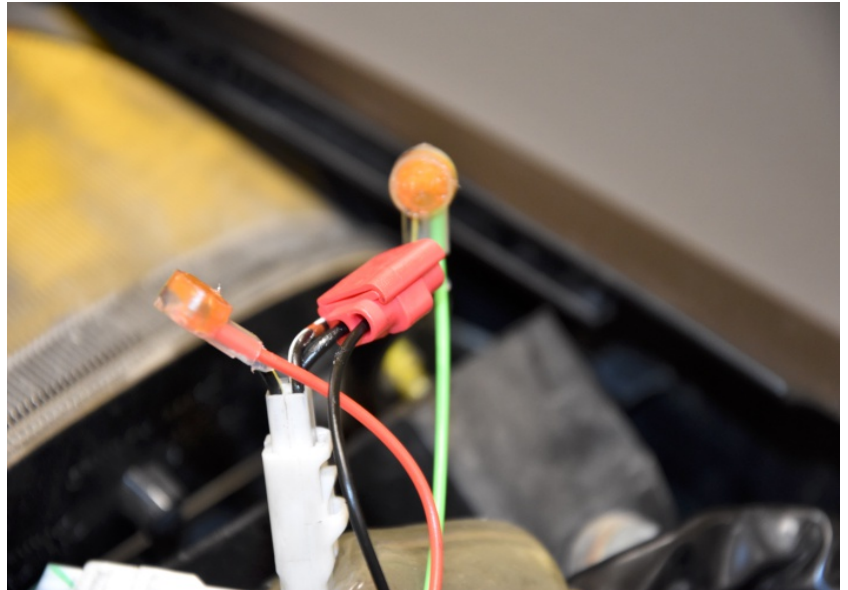

Typical position for the Brake Light Pro.

Secure the unit properly.

