

Brake Light Pro Supplementary Manual



Honda NT700V ABS Deauville 2006-2015 (BLP-U01)

Secure the bike on a stand.



Remove the seat.



Locate the transparent 3-pole rear light assembly connector.

Cut the Red wire.

Connect the BLP Red wire to the Red wire end, which goes to the bike's main wiring harness.

Connect the BLP Green wire to the Red wire end, which goes to the rear light assembly.




Brake Light Pro Supplementary Manual



Honda NT700V ABS Deauville 2006-2015 (BLP-U01)

Connect the BLP Black wire to the Black wire.

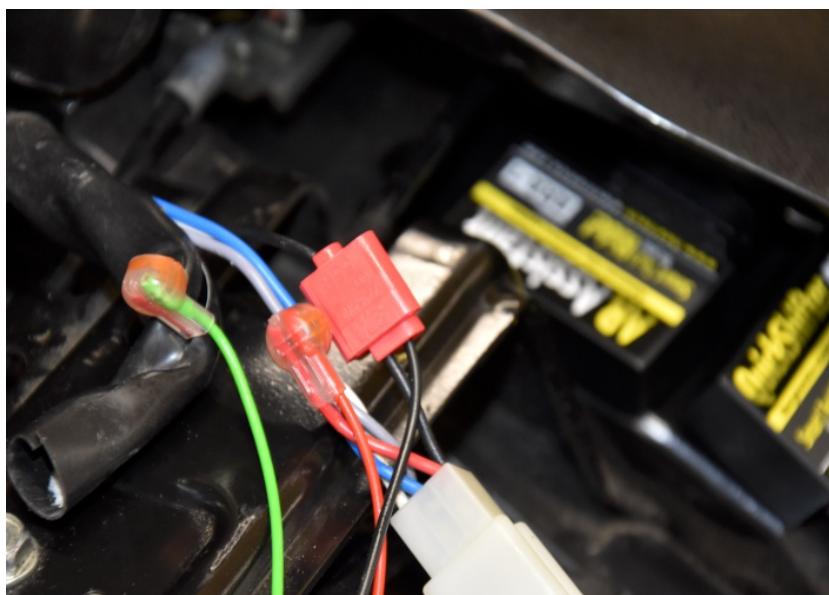

Typical position for the Brake Light Pro.

Secure the unit properly.

