

Brake Light Pro

Supplementary Manual



KTM 790 Adventure ABS TC 2019- (BLP-U01)

Secure the bike on a stand.



Remove the seat.



Locate the white 4-pole rear light assembly connector.



Brake Light Pro

Supplementary Manual




KTM 790 Adventure ABS TC 2019- (BLP-U01)


Cut the White/Green wire.

Connect the BLP Green wire to the White/Green wire end, which goes to the rear light assembly connector.

Connect the BLP Red wire to the White/Green wire end, which goes to the bike's main wiring harness.

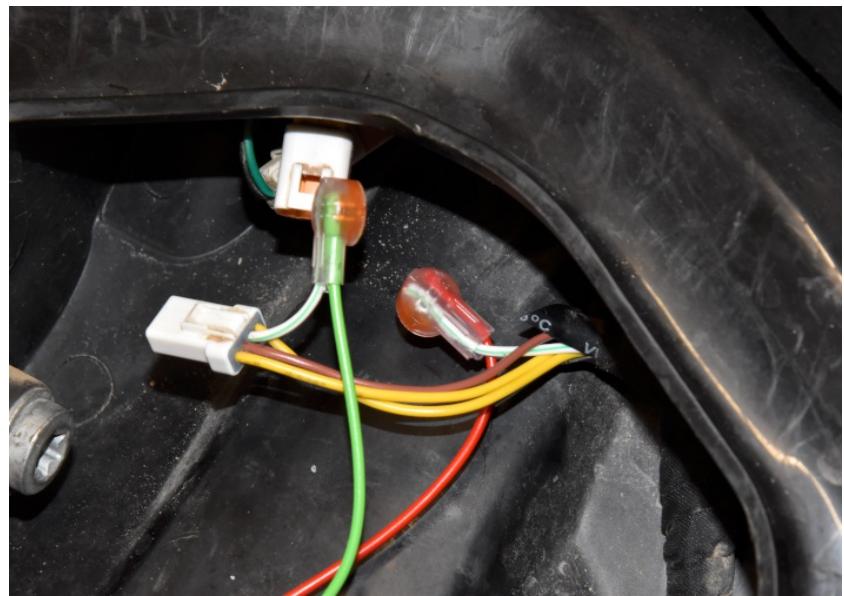

Connect the BLP Black wire to the Brown wire.

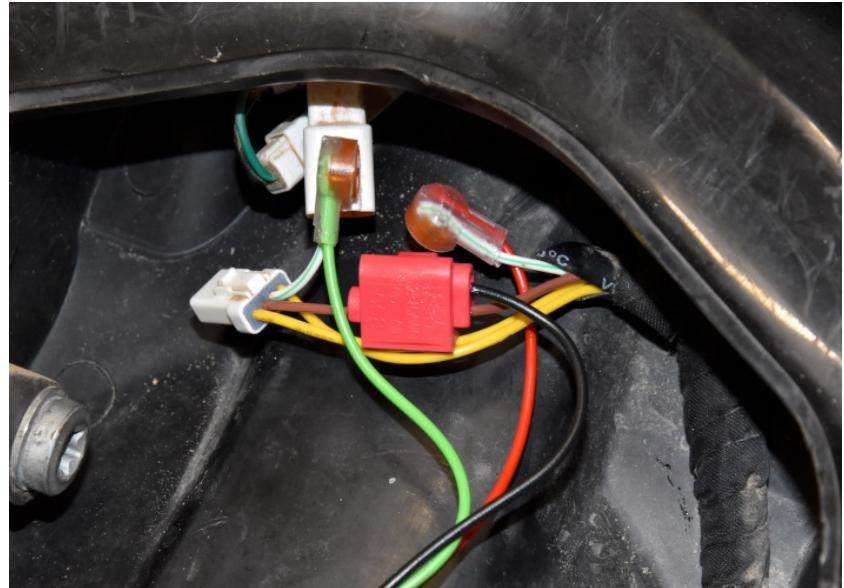

Typical position for the Brake Light Pro.

Secure the unit properly.

