

Brake Light Pro

Supplementary Manual



Kove 800X ABS Rally 2025- (BLP-U01)

Secure the bike on a stand.




Remove the seat.



Locate the rear light assembly connectors.

(White, 3-pole connector)

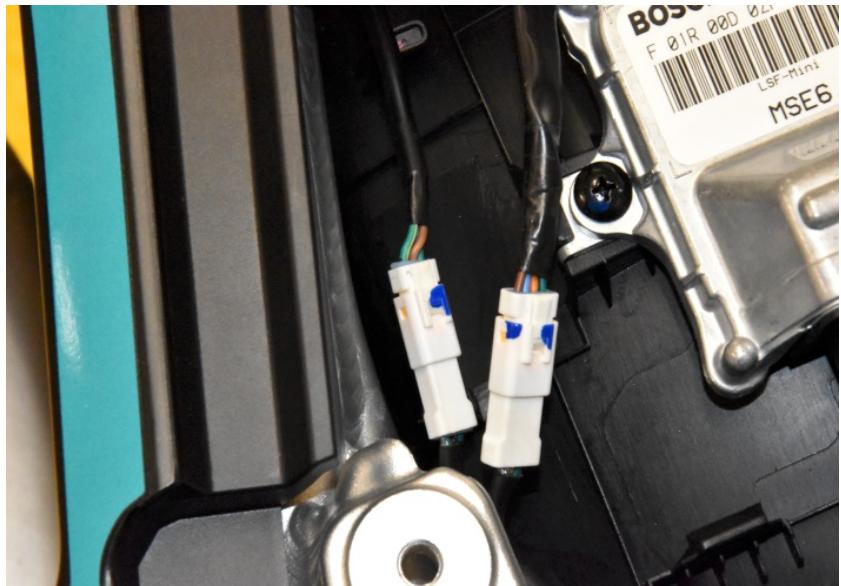

Brake Light Pro

Supplementary Manual




Kove 800X ABS Rally 2025- (BLP-U01)


Cut the Green/Yellow wire.

Connect the BLP Red wire to the Green/Yellow wire end, which is at the wiring harness side.

Connect the BLP Green wire to the Green/Yellow wire end, which goes to the rear light assembly.

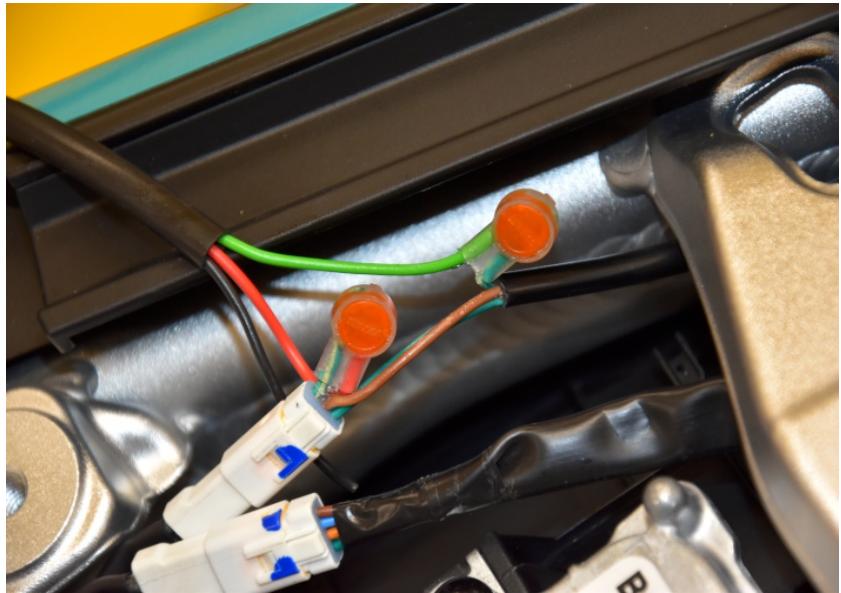

Connect the BLP Black wire to the Green wire.

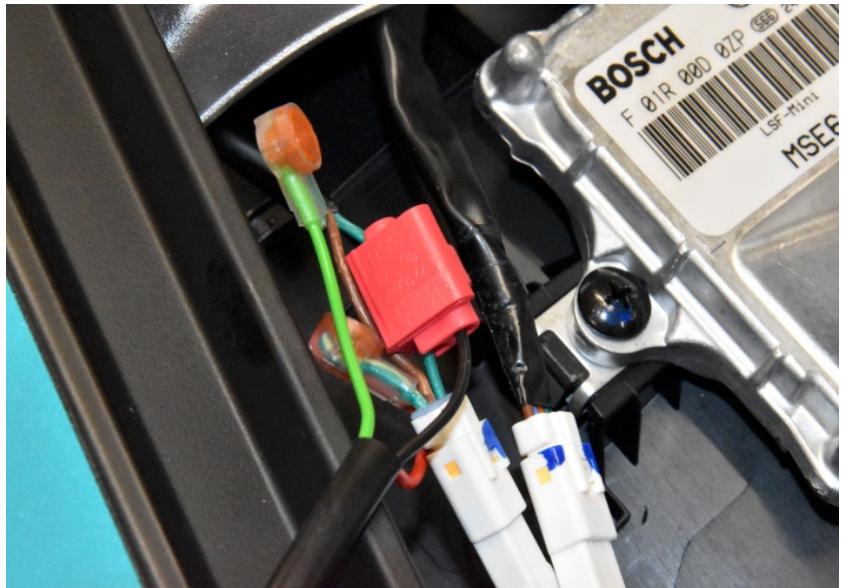

Typical position for the Brake Light Pro.

Secure the unit properly.

