

Brake Light Pro

Supplementary Manual



Moto Morini X-Cape 650 ABS 2021- (BLP-U01)


Secure the bike on a stand.



Remove the rear seat.



Locate the white 3-pole rear light assembly connector in a dust boot.

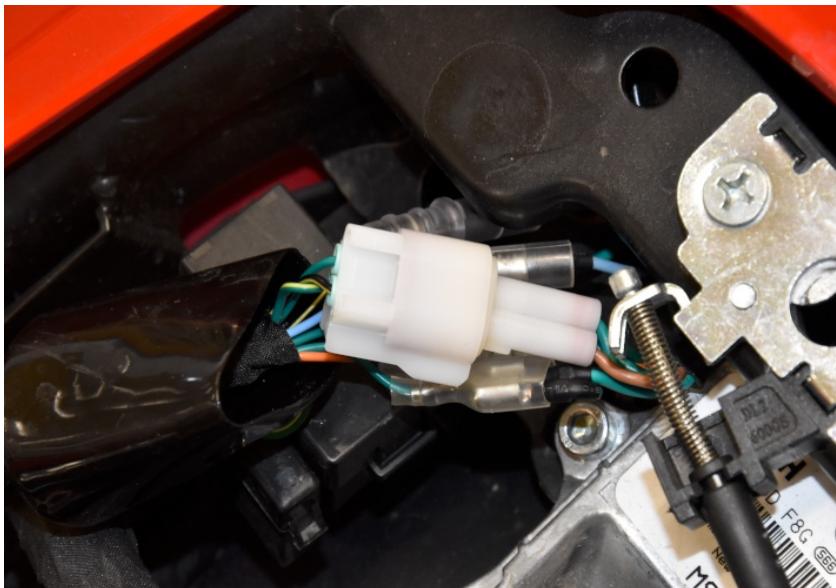

Brake Light Pro

Supplementary Manual



Moto Morini X-Cape 650 ABS 2021- (BLP-U01)

Cut the Green/Yellow wire.

Connect the BLP Red wire to the Green/Yellow wire end, which goes to the bike's main wiring harness.

Connect the BLP Green wire to the Green/Yellow wire end, which goes to the rear light assembly.



Connect the BLP Black wire to the Green wire.



Typical position for the Brake Light Pro.

Secure the unit properly.

