

Brake Light Pro Supplementary Manual



SWM RS500R 2015-2019 (BLP-U01)


Secure the bike on a stand.



Remove the seat and the side fairings.

Remove the rear light.

Locate the rear light assembly connector.

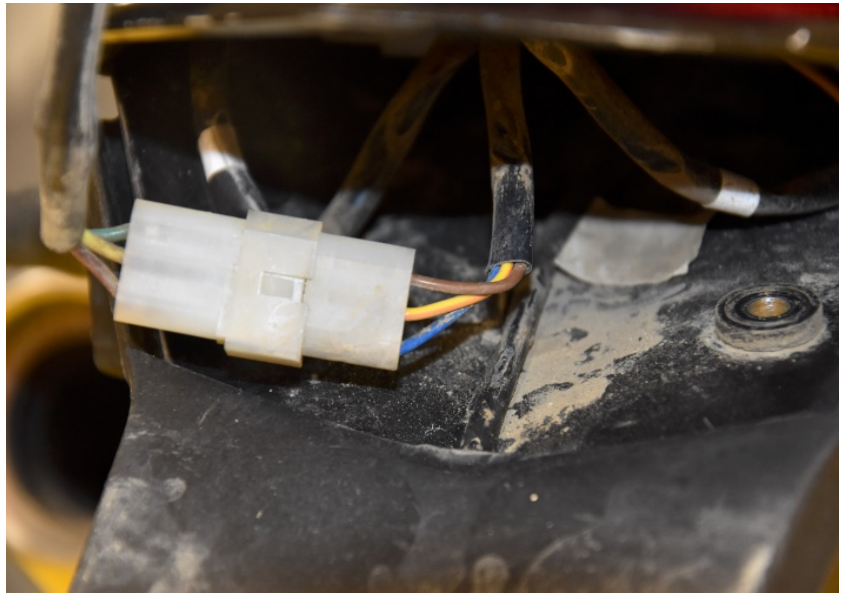

Cut the Yellow/Orange wire of the rear light assembly connector.

Connect the BLP Red wire to the Yellow/Orange wire end, which goes to the bike's main wiring harness.

Connect the BLP Green wire to the Yellow/Orange wire end, which goes to the rear light assembly.




Brake Light Pro Supplementary Manual



SWM RS500R 2015-2019 (BLP-U01)

Connect the BLP Black wire to the Blue wire.

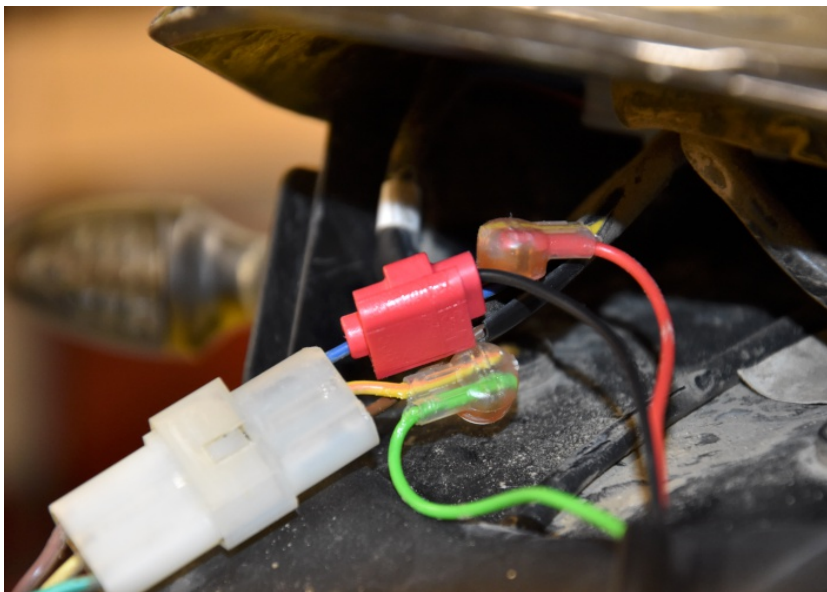

Typical position for the Brake Light Pro.

Secure the unit properly.

