

Brake Light Pro Supplementary Manual



SWM Superdual ABS 2018-2019 (BLP-U01)

Secure the bike on a stand.



Remove the seat and the left side fairing.



Locate the rear light assembly connector.
(White, 8-pole connector on the left side)



Brake Light Pro Supplementary Manual




SWM Superdual ABS 2018-2019 (BLP-U01)


Cut the Yellow/Orange wire of the rear light assembly connector.

Connect the BLP Red wire to the Yellow/Orange wire end, which goes to the bike's main wiring harness.

Connect the BLP Green wire to the Yellow/Orange wire end, which goes to the rear light assembly.

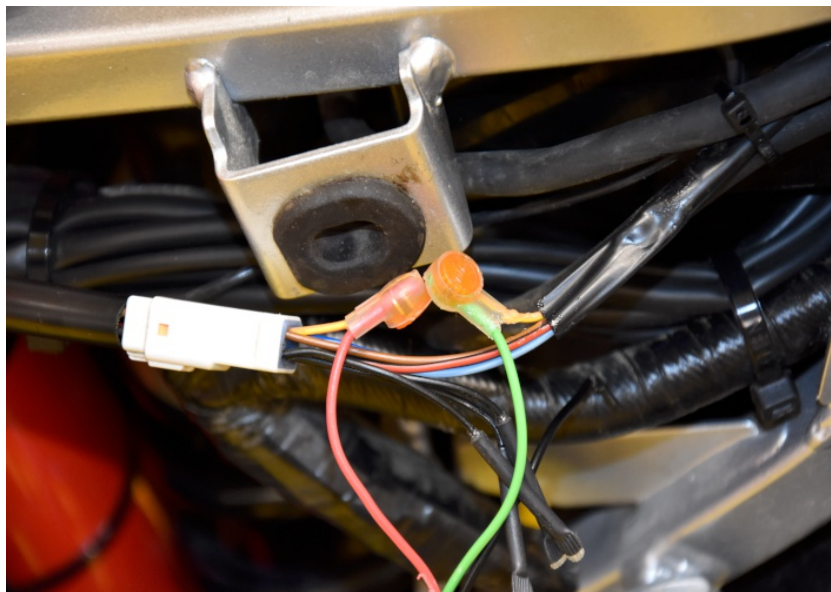

Connect the BLP Black wire to the Blue wire.

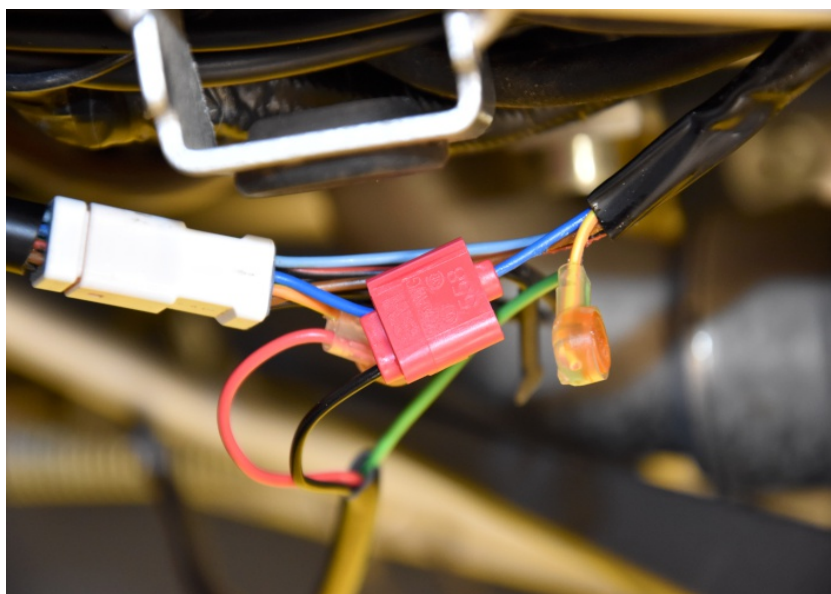

Typical position for the Brake Light Pro.

Secure the unit properly.

