

Brake Light Pro Supplementary Manual

BMW R1200 ABS TC Euro 3 spec 2009-2014 (BLP-U03)

Secure the bike on a stand.



Remove the seat and remove the plastic cover from the rear light.

Remove the rear light.



Cut the Grey/Black wire.

Connect the BLP Green wire to the Grey/Black wire end, which goes to the rear light assembly.


Connect the BLP Red wire to the Grey/Black wire end, which goes to the bike's main wiring harness.



Brake Light Pro Supplementary Manual

BMW R1200 ABS TC Euro 3 spec 2009-2014 (BLP-U03)

Connect the BLP Black wire to the Brown wire.

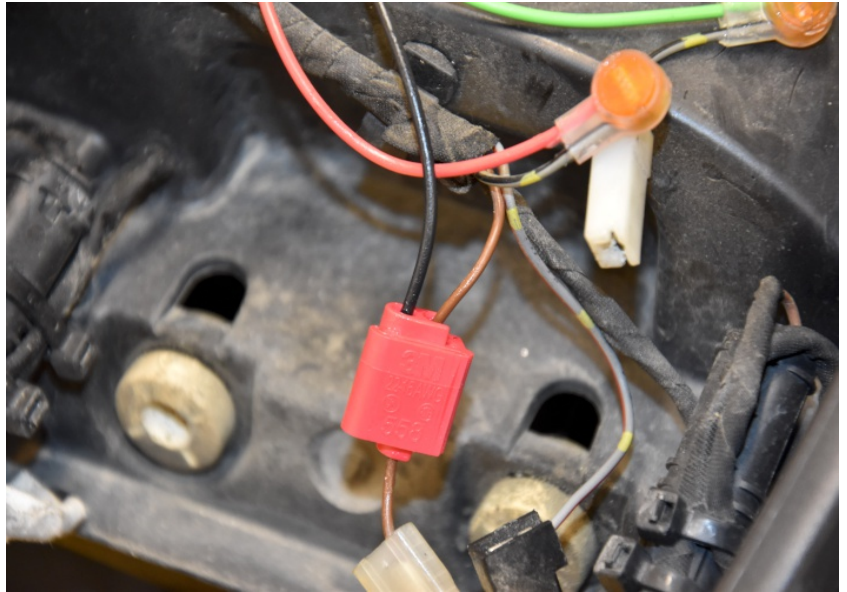

Typical position for the Brake Light Pro.

Secure the unit properly.

