Brake Light Pro

Supplementary Manual



BMW F900XR 2020- (BLP-U05)

Secure the bike on a stand.



Remove the seat and the side fairings on the tail.

Remove the rear light upper cover.



Locate the rear light assembly connector.

(Black, 3-pole connector)



Brake Light Pro

Supplementary Manual




BMW F900XR 2020- (BLP-U05)


Cut the Grey/Black wire.

Connect the BLP Red wire to the Grey/Black wire end, which goes to the bike's main wiring harness.

Connect the BLP Green wire to the Grey/Black wire end, which goes to the rear light assembly.

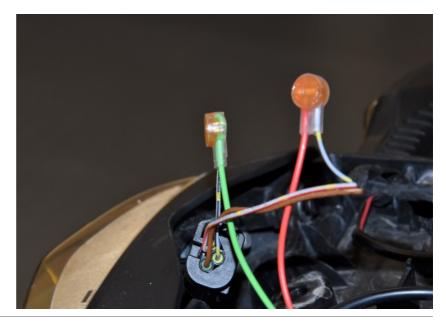

Connect the BLP Black wire to the Brown wire.

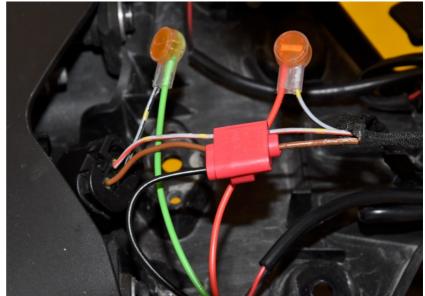

Typical position for the Brake Light Pro.

Secure the unit properly.

