## **Brake Light Pro**Supplementary Manual



## BMW R1200RS ABS TC Euro 3 spec 2015-2018 (BLP-U05)


Secure the bike on a stand.



Remove the seats.



Locate the black 3-pole rear light assembly connector.

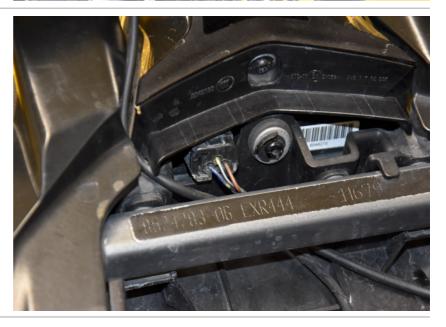

## **Brake Light Pro**Supplementary Manual



## BMW R1200RS ABS TC Euro 3 spec 2015-2018 (BLP-U05)


Cut the Grey/Black wire.

Connect the BLP Green wire to the Grey/Black wire end, which goes to the rear light assembly.

Connect the BLP Red wire to the Grey/Black wire end, which goes to the bike's main wiring harness.



Connect the BLP Black wire to the Brown wire.

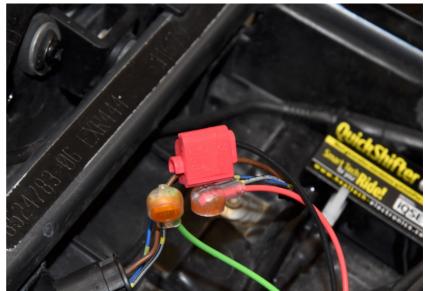

Typical position for the Brake Light Pro.

Secure the unit properly.

Pay attention! If the brake light flashes, the light error message may appear on the dashboard for a few moments!

