

GIPRO X-TYPE GEAR INDICATOR

Supplementary Manual

Harley-Davidson Night Rod 2006- (GPXT + GPX-U01)


Secure the bike on a stand.



Remove the rear seats.

Remove the cover from the airbox.

Remove the airbox.

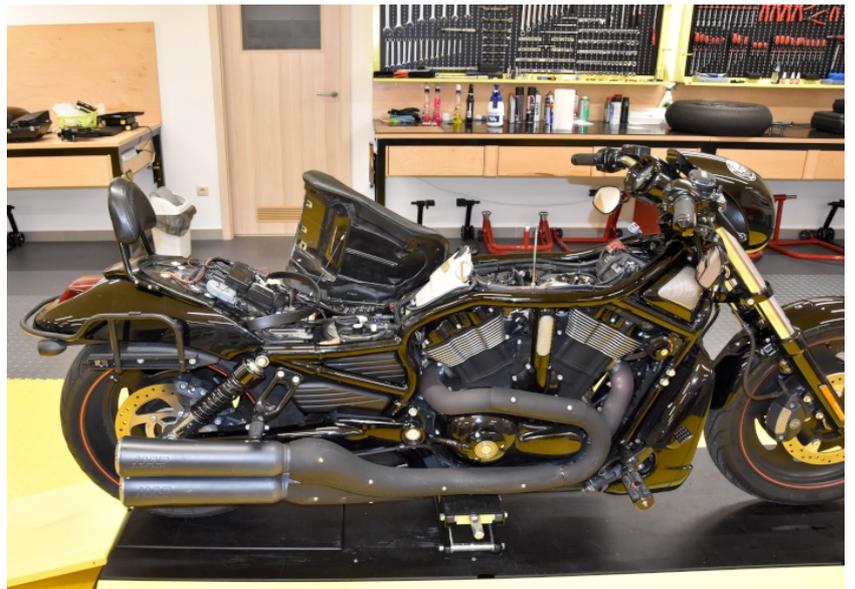

Locate the ECU/ECM connector under the rear seat.



GIPRO X-TYPE GEAR INDICATOR

Supplementary Manual



Harley-Davidson Night Rod 2006- (GPXT + GPX-U01)


Connect the GPX White wire to the Black/Blue wire of the ECU/ ECM connector.



Connect the GPX Black wire to the Black/Green wire of the ECU/ECM connector.



Connect the GPX Red wire to the White/Black wire of the ECU/ECM connector.

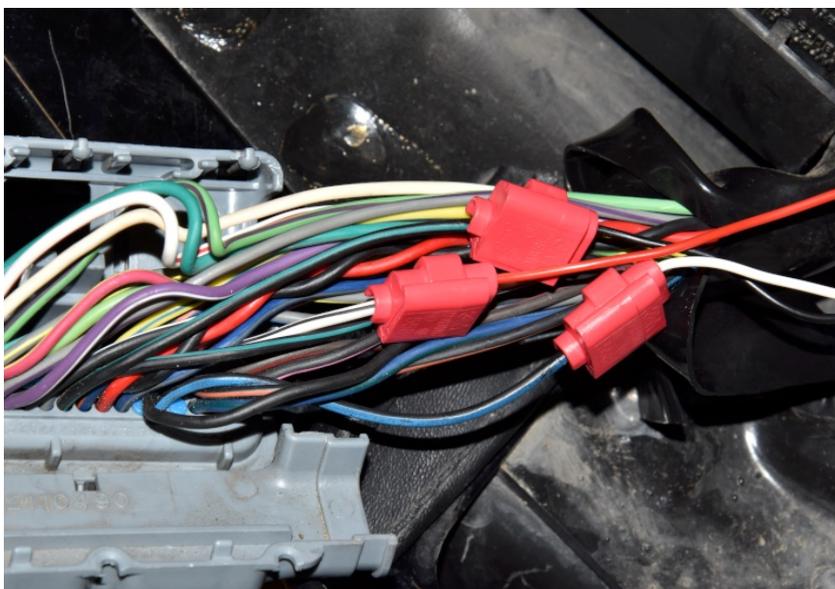

GIPRO X-TYPE GEAR INDICATOR

Supplementary Manual



Harley-Davidson Night Rod 2006- (GPXT + GPX-U01)

Connect the GPX Green wire to the Red wire of the ECU/ECM connector.



Typical position for the gear indicator.

Secure the unit properly.

