

# KTM SMR 450

(2004-2007)



## SUPPLEMENTARY MANUAL

for iQSE-2 + QSH-CKP

SECURE THE BIKE ON A STAND.



REMOVE THE  
LEFT AND RIGHT SIDE PLASTIC  
COVERS.



REMOVE THE THE FUEL TANK.






# SUPPLEMENTARY MANUAL

for iQSE-2 + QSH-CKP


CONNECT THE TWO QSH GREEN WIRES TO THE TWO WIRES OF THE CRANKSHAFT POSITION SENSOR (CKP).

(2-POLE, BLUE CONNECTOR WITH RED AND GREEN WIRES.)

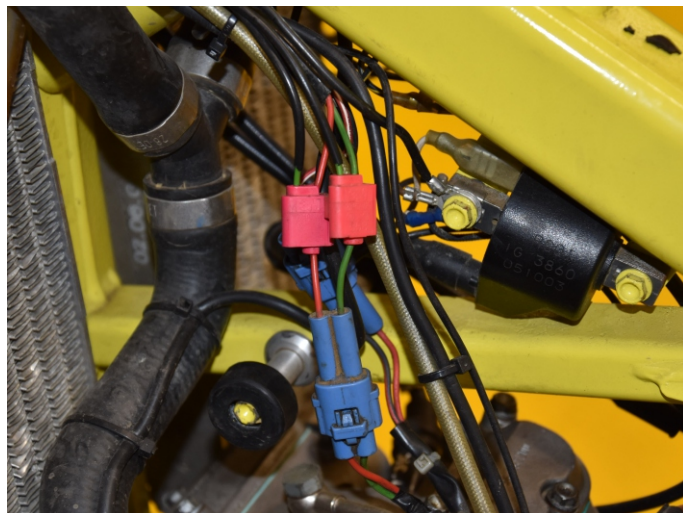


CONNECT THE QSH BLACK WIRE TERMINAL TO THE IGNITION COIL GROUND TERMINAL.

ALSO CONNECT THE IGNITION COIL GROUND TERMINAL TO THE BATTERY NEGATIVE TERMINAL.

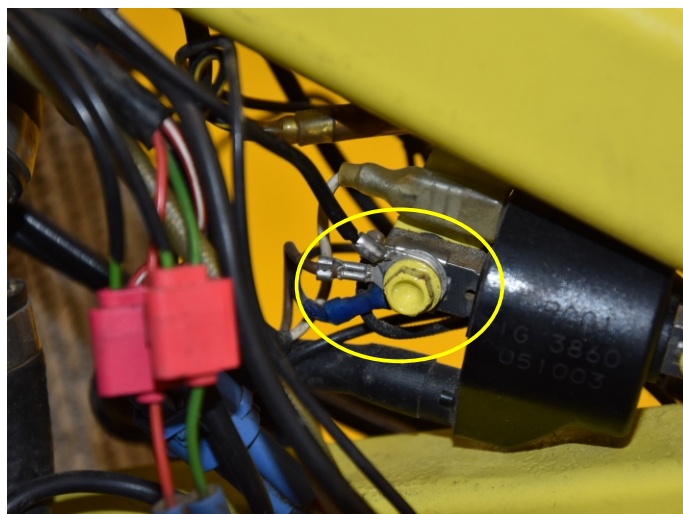

CONNECT THE QSH RED WIRE TO THE BATTERY POSITIVE TERMINAL VIA AN ON/OFF SWITCH.

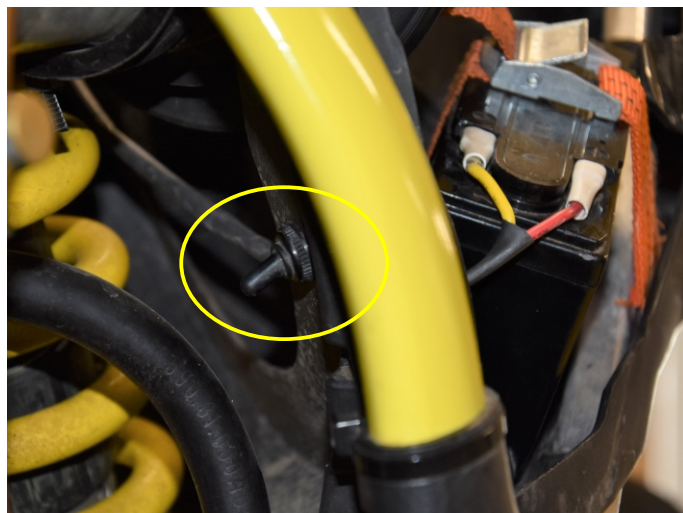



# KTM SMR 450

[2004-2007]



## SUPPLEMENTARY MANUAL

for iQSE-2 + QSH-CKP

**MOUNT THE QSE SENSOR UNDER  
THE BOLT OF GEARBOX SHAFT.**

(REPLACE THE BOLT WITH THE ONE SUPPLIED. PLACE  
THE CONICAL WASHERS AT THE TWO SIDES OF THE  
SENSOR LIKE THIS: (O). TIGHTEN THE BOLT IN THIS  
POSITION BY ABOUT 6 NM. IF YOU DO NOT HAVE  
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE  
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.)



**TYPICAL POSITION FOR THE  
QUICKSHIFTER EASY.**

**SECURE THE UNIT PROPERLY.**

