

QuickShifter easy Supplementary Manual



KTM SX-F 350 2011- (iQSE-1 + QSH-F1E)

Secure the bike on a stand.



Remove the seat.

Remove the side fairings.

Remove the fuel tank.



Locate the fuel injector connectors under
the the fuel tank.

(Black, 2-pole connectors)




QuickShifter easy Supplementary Manual



KTM SX-F 350 2011- (iQSE-1 + QSH-F1E)

Connect the QSH connectors in-line with the injector connectors.

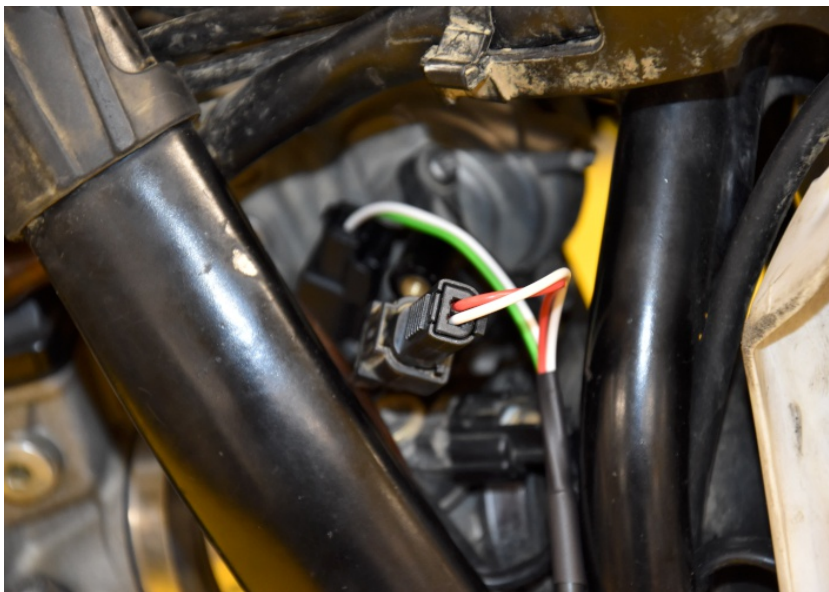

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor under the bolt of gearbox shaft.

(Replace the bolt with the one supplied. Tighten the bolt in this position by about 6 Nm. If you do not have a torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



QuickShifter easy Supplementary Manual



KTM SX-F 350 2011- (iQSE-1 + QSH-F1E)

Typical position for the QuickShifter easy.

Secure the unit properly.

