

QuickShifter easy Supplementary Manual

Suzuki DL650 ABS TC V-Strom 2012- (iQSE-1 + QSH-F2A)

Secure the bike on a stand.




Remove the seat and the side fairings.

Remove the fuel tank and the airbox.



Plug the QSH connectors in-line with the fuel injector connectors.

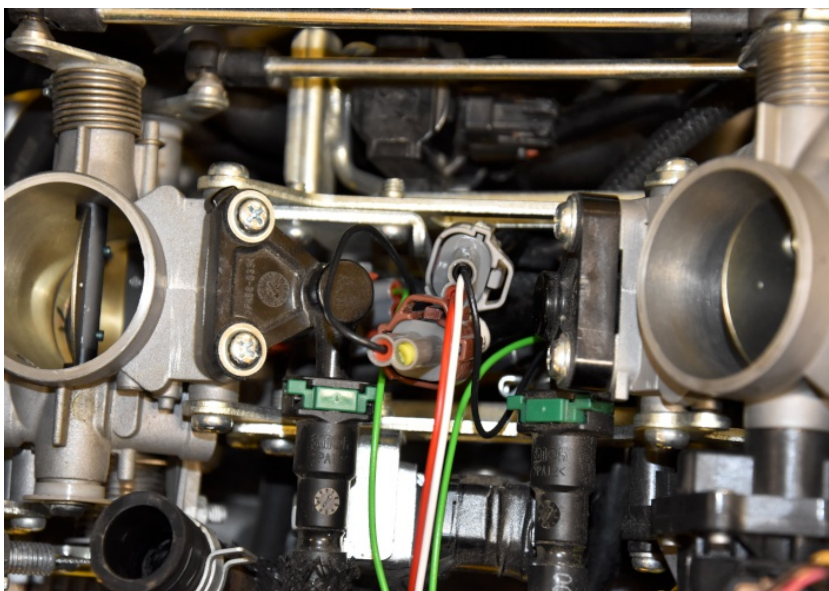


QuickShifter easy Supplementary Manual



Suzuki DL650 ABS TC V-Strom 2012- (iQSE-1 + QSH-F2A)

Connect the QSH Black wire terminal to the battery negative terminal.

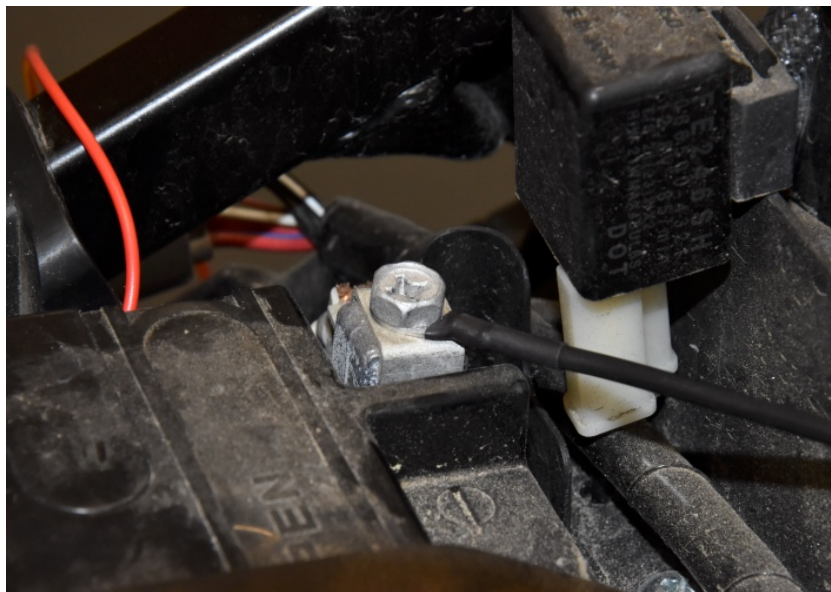

Mount the QSE Sensor.

*(Replace the bolt with the one supplied.
Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

