

QuickShifter easy Supplementary Manual



Honda XL1000V ABS Varadero 2003-2012 (iQSE-1 + QSH-F2B)

Secure the bike on a stand.




Remove the seat.

Remove the fuel tank and remove the
airbox.



Locate the fuel injector connectors.

Plug the QSH connectors in-line with the
fuel injector connectors.

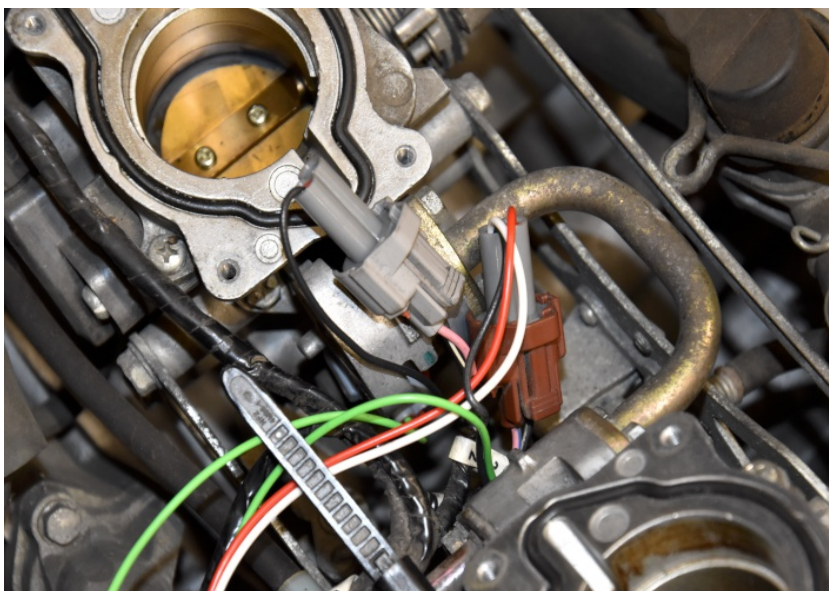

QuickShifter easy Supplementary Manual



Honda XL1000V ABS Varadero 2003-2012 (iQSE-1 + QSH-F2B)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

