

# QuickShifter easy

## Supplementary Manual



### Royal Enfield Interceptor 650 ABS 2019- (iQSE-1 + QSH-F2B)

Secure the bike on a stand.



Remove the side covers.


Remove the seat.

Remove the fuel tank.



Locate the fuel injector connectors under the fuel tank.

Connect the QSH connectors in-line with the injector connectors.

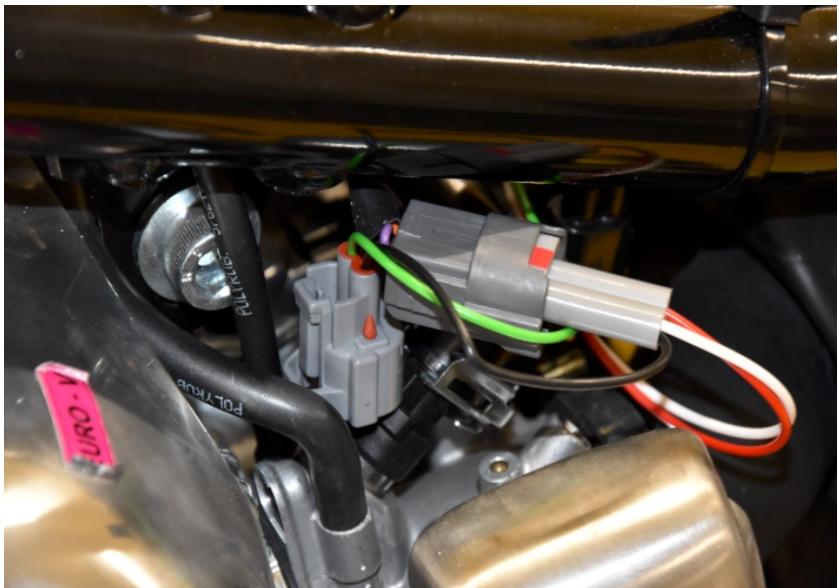


# QuickShifter easy

## Supplementary Manual



### Royal Enfield Interceptor 650 ABS 2019- (iQSE-1 + QSH-F2B)

Connect the QSH Black wire terminal to the battery negative terminal.

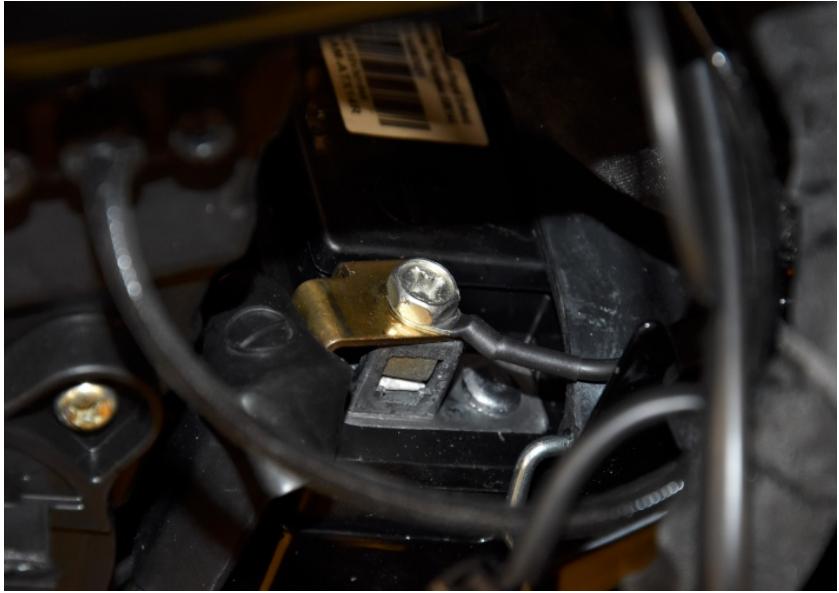

Mount the QSE sensor.

*(Place the sensor in the rod as shown.  
Tighten the nut by hand fully and then by a  
1/4 turn using a wrench but maximum to  
about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

