

QuickShifter easy

Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (iQSE-1 + QSH-F2B)

Secure the bike on a stand.




Remove the seats.



Remove the side covers from the airbox.

Remove the fuel tank.

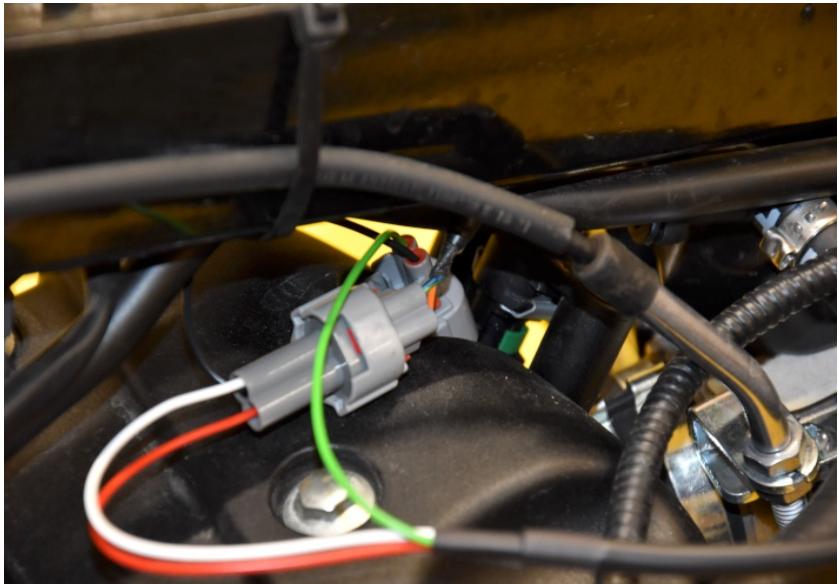

Locate the fuel injector connector under the fuel tank.

Connect the QSH connectors in-line with the injector connectors.

(Make sure the QSH plugs marked with RED square are connected, and leave the unmarked coupler unused. You may connect the male and female plugs of the unused pair together or isolate with tape.)

QuickShifter easy

Supplementary Manual



Royal Enfield Meteor 350 ABS 2021- (iQSE-1 + QSH-F2B)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench,
tighten the bolt until the shift arm is tight
on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

