

BMW F800 ABS GS 2013- (iQSE-1 + QSH-F2D)

Secure the bike on a stand.



Remove the seat.

Remove the middle tank cover and
remove the left and right side covers.

Remove the airbox.



Locate the fuel injector connectors.

(Black, 2-pole connectors below the airbox)




QuickShifter easy Supplementary Manual



BMW F800 ABS GS 2013- (iQSE-1 + QSH-F2D)

Plug the QSH connectors in-line with the fuel injector connectors.

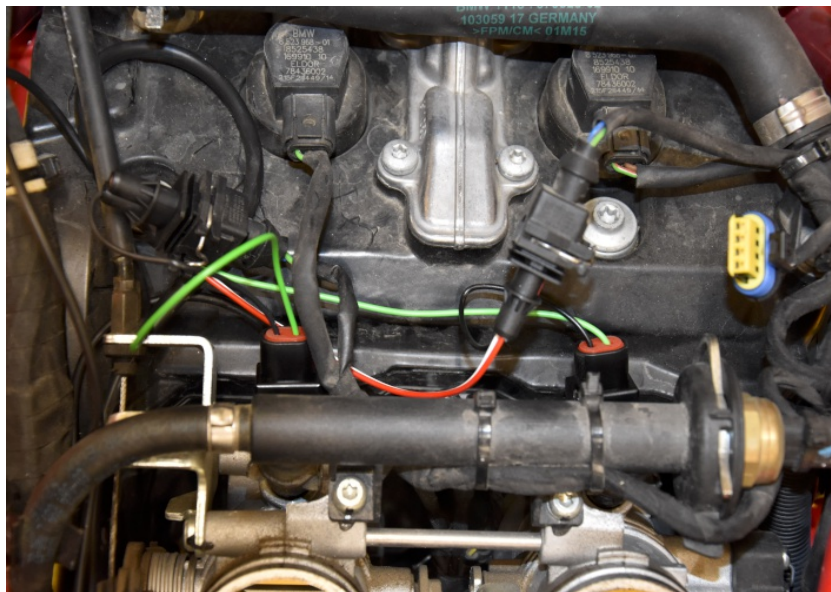

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the conical washers at the two sides
of the sensor like this: (O). Tighten the bolt
in this position by about 6 Nm. If you do not
have torque wrench, tighten the bolt until
the shift arm is tight on the gearbox shaft.)*



QuickShifter easy Supplementary Manual



BMW F800 ABS GS 2013- (iQSE-1 + QSH-F2D)

Typical position for the QuickShifter easy.

Secure the unit properly.

