

# QuickShifter easy Supplementary Manual



BMW R1200GS Euro 3 spec 2004-2012 (iQSE-1 + QSH-F2D)

Secure the bike on a stand.



Remove the seat and remove the black plastic covers below the fuel tank.



Locate the fuel injector connectors under the the black plastic covers.

Plug the QSH connectors in-line with the fuel injector connectors.

*(Black, 2-pole connectors)*



# QuickShifter easy Supplementary Manual




BMW R1200GS Euro 3 spec 2004-2012 (iQSE-1 + QSH-F2D)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Replace the bolt with the one supplied. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*

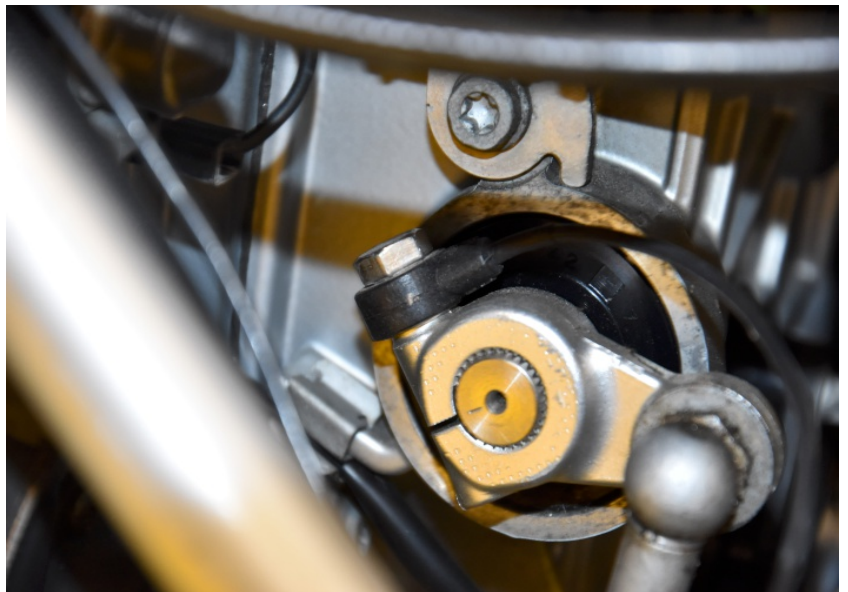

Typical position for the QuickShifter easy.

Secure the unit properly.

