

QuickShifter easy

Supplementary Manual



Ducati Monster 1100 2009-2013 (iQSE-1 + QSH-F2D)

Secure the bike on a stand.



Remove the seat.

Remove the covers from the fuel tank.


Remove the fuel tank.



Locate the fuel injector connectors under the airbox.

Plug the QSH connectors in-line with the fuel injector connectors.

(Black, 2-pole connectors)

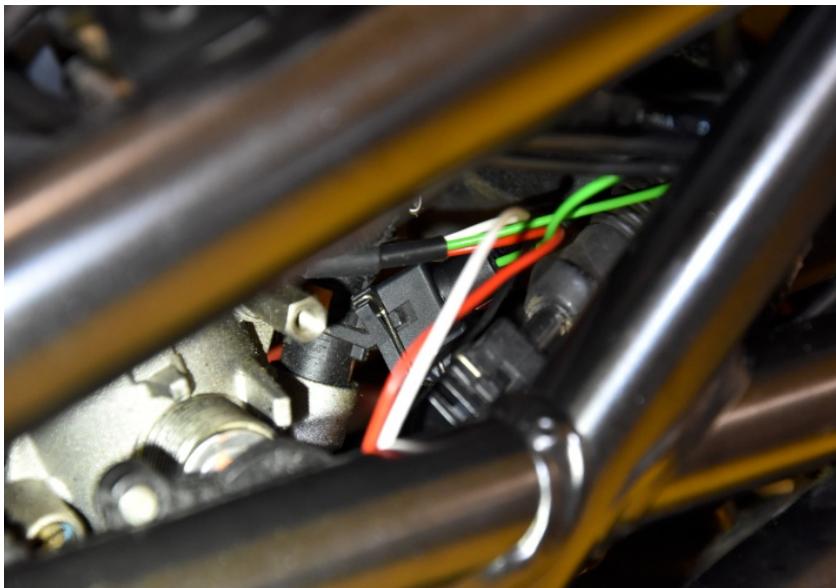

QuickShifter easy


Supplementary Manual



Ducati Monster 1100 2009-2013 (iQSE-1 + QSH-F2D)


Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)

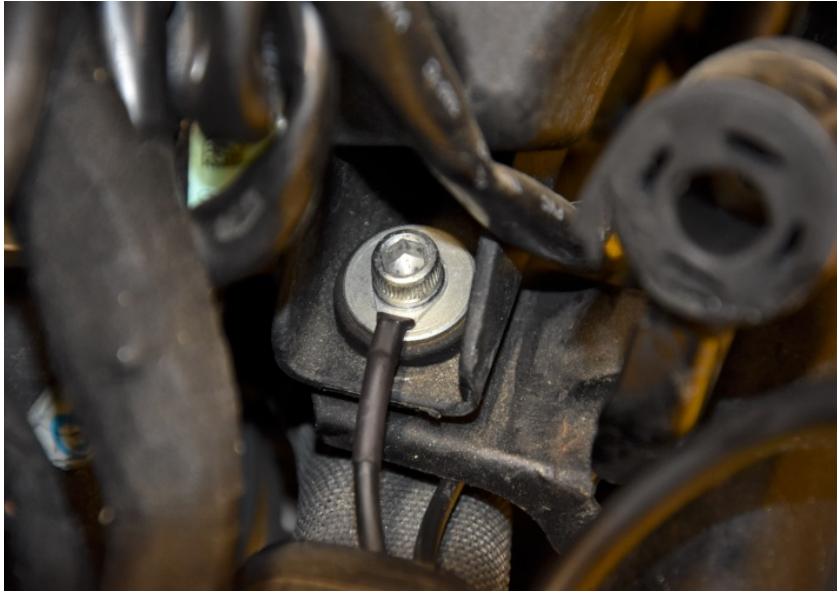

Mount the QSE sensor.

(Replace the bolt with the one supplied. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)

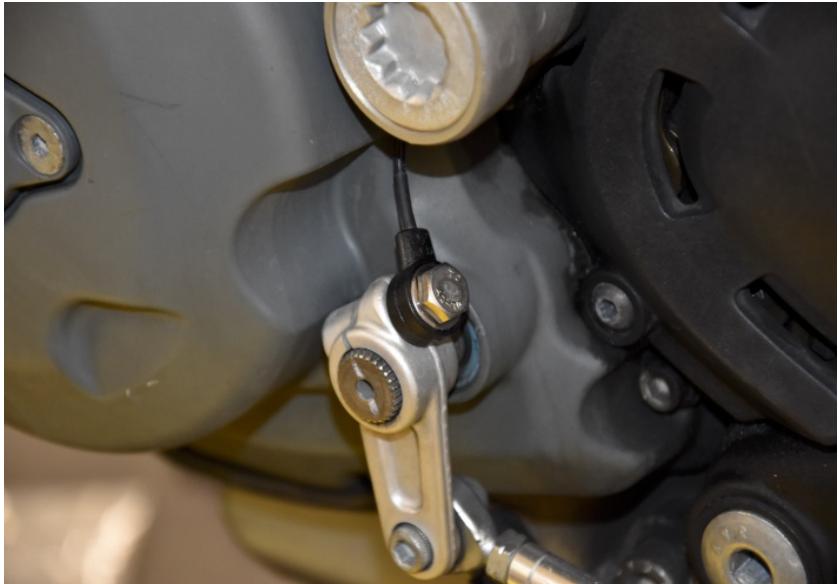

Typical position for the QuickShifter easy.

Secure the unit properly.

