

QuickShifter easy Supplementary Manual



Harley-Davidson Night Rod 2006- (iQSE-1 + QSH-F2D)

Secure the bike on a stand.



Remove the cover from the airbox.

Remove the airbox.



Plug the QSHconnectors in-line with the fuel injector connectors.

(Black, 2-pole connectors below the airbox)



QuickShifter easy

Supplementary Manual



Harley-Davidson Night Rod 2006- (iQSE-1 + QSH-F2D)


Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)



Mount the QSE sensor.

(Replace the bolt with the one supplied. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)

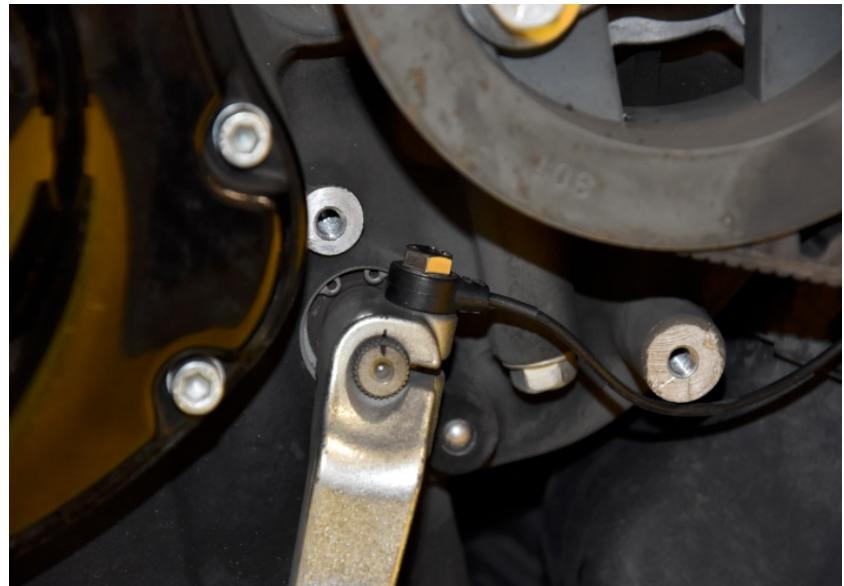

Typical position for the QuickShifter easy.

Secure the unit properly.

