

# QuickShifter easy

## Supplementary Manual



### Moto Guzzi V7 III ABS TC 2019- (iQSE-W1 + QSH-F2D)

Secure the bike on a stand.




Remove the seat and the fuel tank.



Locate the fuel injector connectors.

Connect the QSH connectors in-line with the injector connectors.

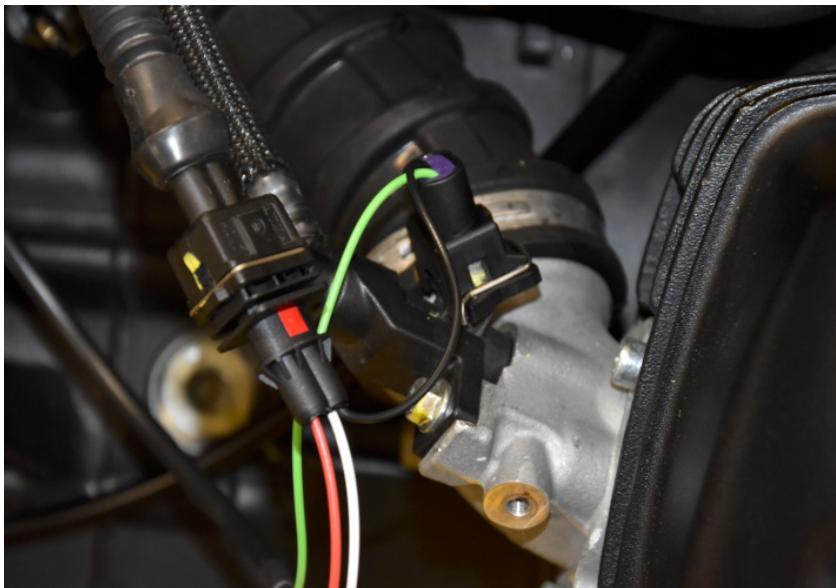

# QuickShifter easy

## Supplementary Manual



### Moto Guzzi V7 III ABS TC 2019- (iQSE-W1 + QSH-F2D)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have a torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

