

QuickShifter easy Supplementary Manual

SWM Superdual ABS 2018-2019 (iQSE-1 + QSH-F2D)

Secure the bike on a stand.



Remove the seat and the side fairings.


Remove the fuel tank.



Locate the fuel injector connectors under the fuel tank.

Plug the QSH connectors in-line with the fuel injector connectors.

(Make sure the QSH plugs marked with RED square are connected, and leave the other one coupler unused)

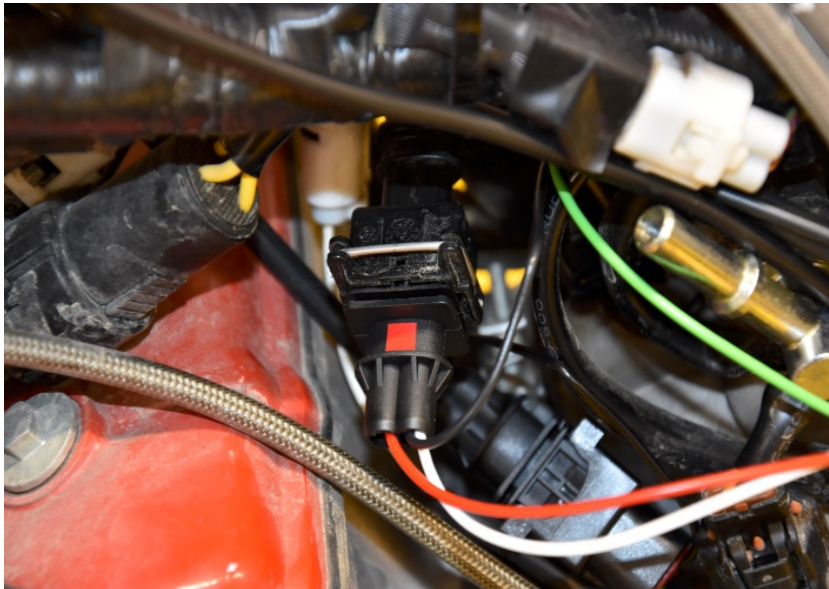

QuickShifter easy Supplementary Manual



SWM Superdual ABS 2018-2019 (iQSE-1 + QSH-F2D)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

