

QuickShifter easy Supplementary Manual



Honda VFR800X ABS TC 2011- (iQSE-W1 + QSH-F4A)

Secure the bike on a stand.




Remove the seats and the side covers.

Remove the fuel tank and the airbox.



Locate the fuel injector connectors under the airbox.

Connect the QSH connectors in-line with the fuel injector connectors.

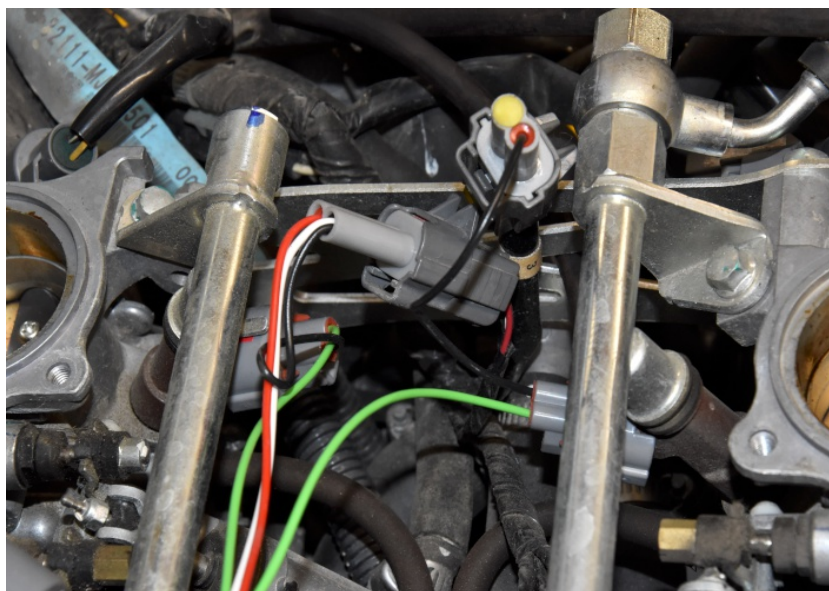


QuickShifter easy Supplementary Manual



Honda VFR800X ABS TC 2011- (iQSE-W1 + QSH-F4A)

Connect the QSH Black wire terminal to the battery negative terminal.

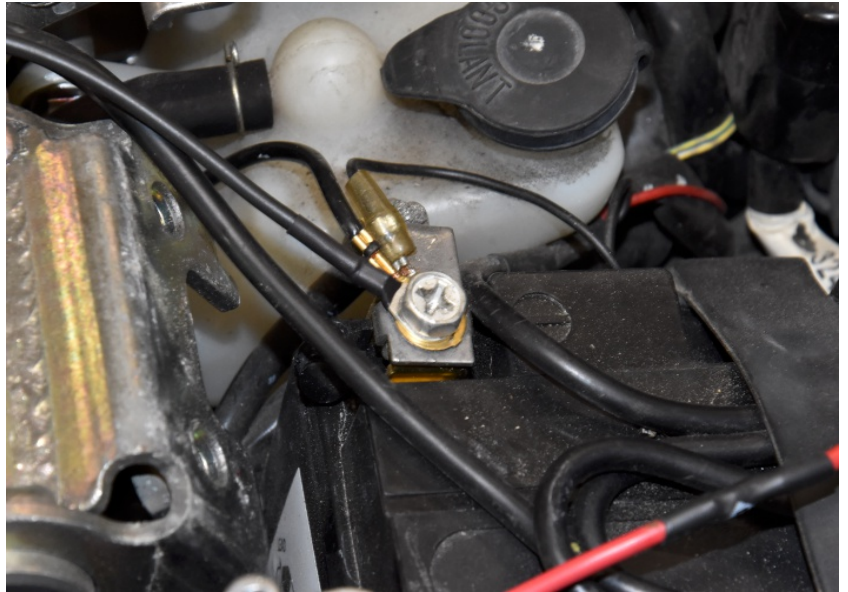

Mount the QSE sensor.

(Replace the bolt with the one supplied. Tighten the bolt in this position by about 6 Nm. If you do not have a torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

