

# QuickShifter easy Supplementary Manual

## Honda VFR800X Crossrunner 2011- (iQSE-1 + QSH-F4A)

Remove the seat.

Remove the fuel tank.




Remove the airbox.



Plug the QSH connectors in-line with the  
fuel injector connectors.

*(Grey, 2-pole connectors bellow the airbox)*

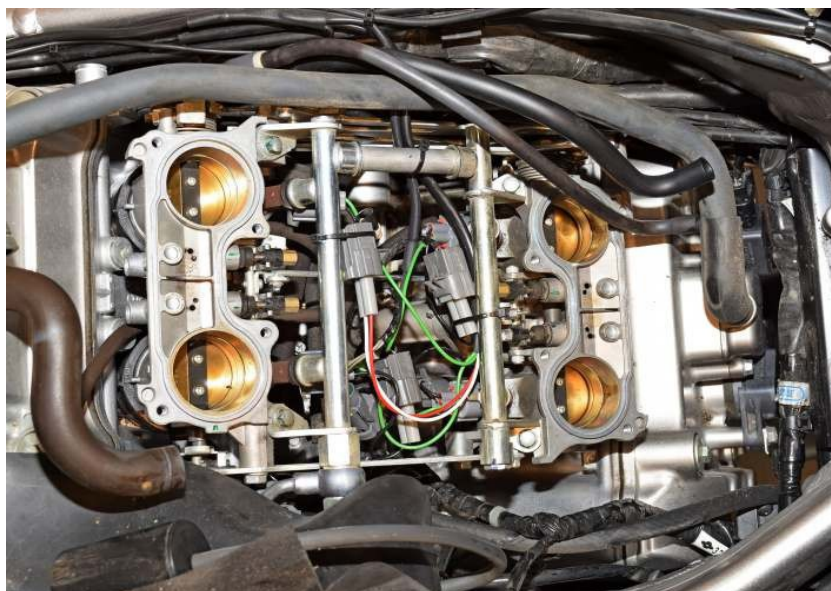

# QuickShifter easy Supplementary Manual



## Honda VFR800X Crossrunner 2011- (iQSE-1 + QSH-F4A)

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Place the conical washers at the two sides  
of the sensor like this: (O). Tighten the bolt  
in this position by about 6 Nm. If you do not  
have torque wrench, tighten the bolt until  
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

