## **QuickShifter easy** Supplementary Manual



## Honda VFR800X Crossrunner 2011- (iQSE-1 + QSH-F4A)

Remove the seat.

Remove the fuel tank.




Remove the airbox.



Plug the QSH connectors in-line with the fuel injector connectors.

(Grey, 2-pole connectors bellow the airbox)

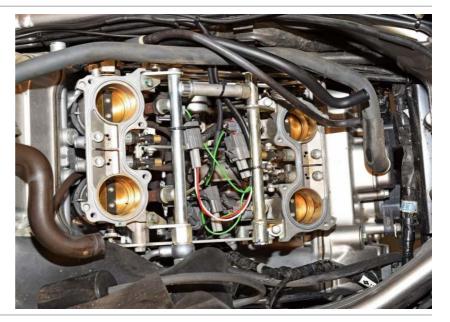

## **QuickShifter easy** Supplementary Manual



## Honda VFR800X Crossrunner 2011- (iQSE-1 + QSH-F4A)

Connect the QSH Black wire terminal to the battery negative terminal.

(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)



Mount the QSE sensor.

(Replace the bolt with the one supplied.

Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

