

QuickShifter easy

Supplementary Manual



MV Agusta Turismo Veloce 800 ABS TC 2015- (iQSE-1 + QSH-F4B)

Secure the bike on a stand.



Remove the seats.

Remove the upper fairing.

Remove the side covers from the fuel tank.


Remove the fuel tank and the airbox.



Locate the fuel injector connector under the fuel tank.

Connect the QSH connectors in-line with the injector connectors.

(Make sure the QSH plugs marked with RED square are connected, and leave one coupler unused. You may connect the male and female plugs of the unused pair together or isolate with tape.)

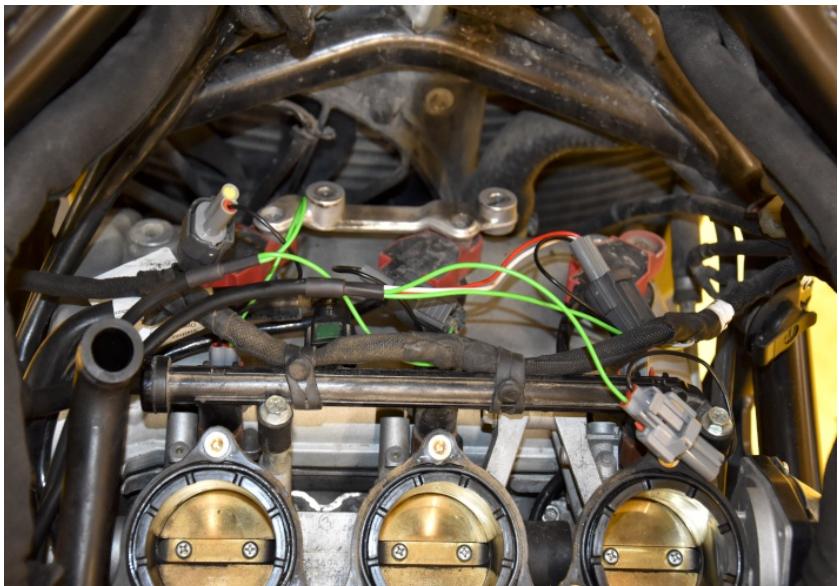

QuickShifter easy

Supplementary Manual




MV Agusta Turismo Veloce 800 ABS TC 2015- (iQSE-1 + QSH-F4B)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the supplied washers at both sides of
the sensor. Tighten the bolt in this position
by about 6 Nm. If you do not have torque
wrench, tighten the bolt until the shift arm
is tight on the gearbox shaft.)*

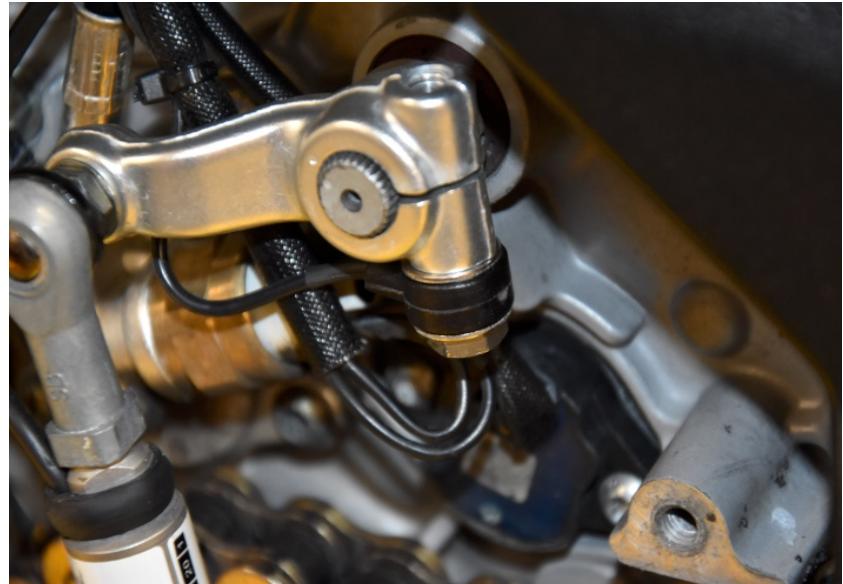

Typical position for the QuickShifter easy.

Secure the unit properly.

