

# QuickShifter easy

## Supplementary Manual



### Harley-Davidson Street 750 2014- (iQSE-1 + QSH-P1H)

Remove the seats and the side covers.



Lift up the fuel tank.



Locate the ignition coil connector  
between the cylinders.




# QuickShifter easy

## Supplementary Manual




### Harley-Davidson Street 750 2014- (iQSE-1 + QSH-P1H)

Plug the QSH connectors in-line with the ignition coil connectors.

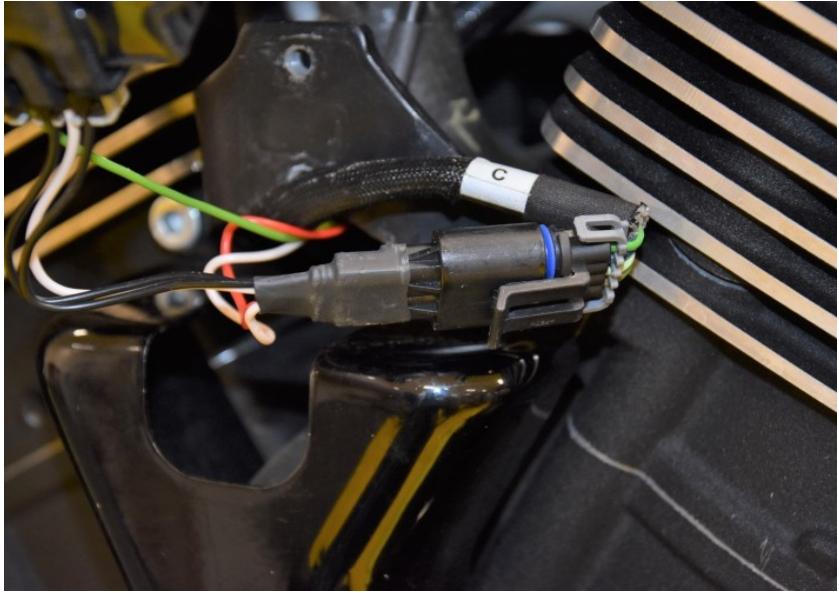


Connect the QSH Black wire terminal to the battery negative terminal.

*(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)*

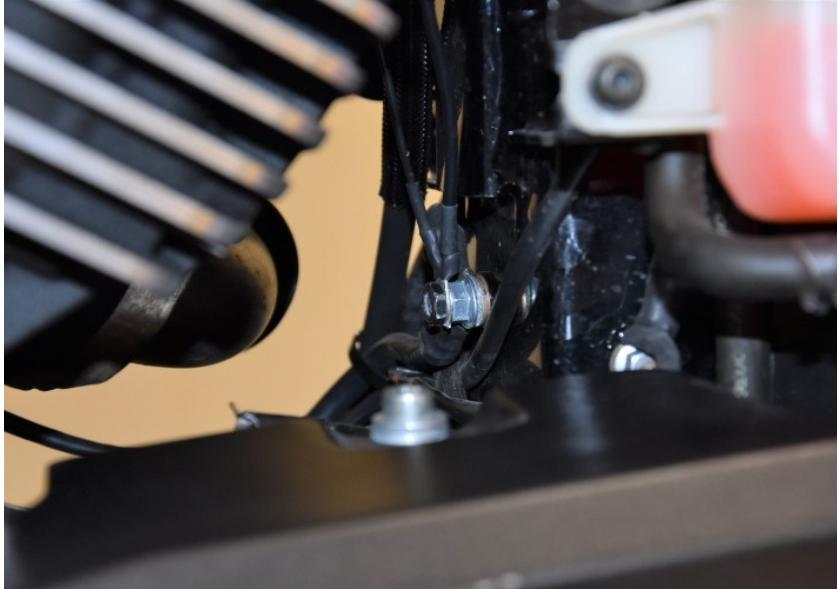

Mount the QSE sensor.

*(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*

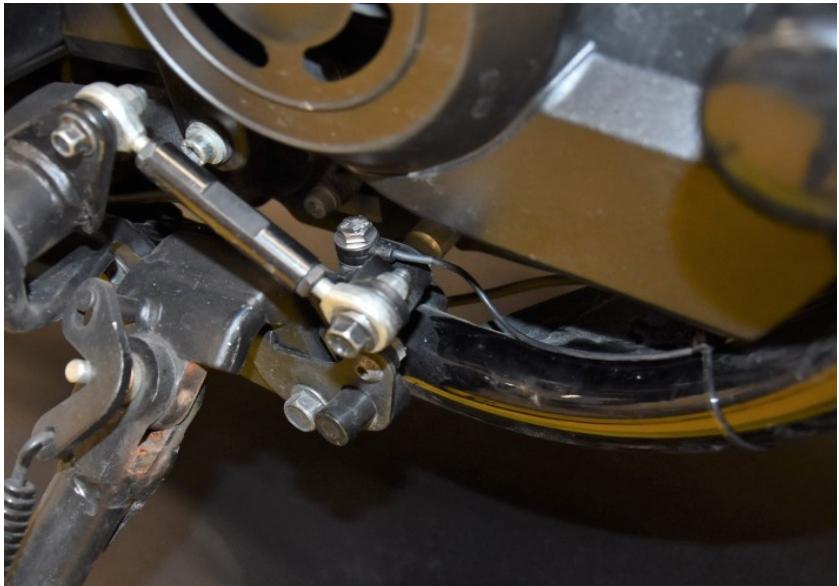

# QuickShifter easy

## Supplementary Manual



Harley-Davidson Street 750 2014- (iQSE-1 + QSH-P1H)

Typical position for the QuickShifter easy.

Secure the unit properly.

