## **QuickShifter easy** Supplementary Manual



## Yamaha XTZ690 ABS Tenere 700 2021- (iQSE-1 + QSH-P2A)

Secure the bike on a stand.



Remove the seats.


Remove the the side fairings.

Remove the plastic covers from the fuel tank.

Remove the fuel tank.



Plug the QSH connectors in-line with the ignition coil connectors.

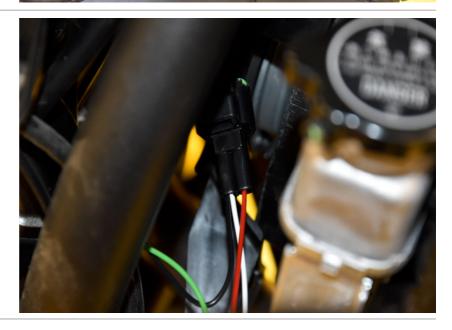

## **QuickShifter easy** Supplementary Manual



## Yamaha XTZ690 ABS Tenere 700 2021- (iQSE-1 + QSH-P2A)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (0). Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



Typical position for the QuickShifter easy.

Secure the unit properly.

