

KTM 690 Duke ABS TC 2012-2020 (iQSE-1 + QSH-P2B)

Secure the bike on a stand.



Remove the seats.

Remove the plastic covers from the fuel tank.

Remove the fuel tank.



Locate the ignition coil connectors on the right side.

Plug the QSH connectors in-line with the ignition coil connectors



QuickShifter easy Supplementary Manual




KTM 690 Duke ABS TC 2012-2020 (iQSE-1 + QSH-P2B)

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Place the sensor in the rod as shown.
Tighten the nut by hand fully and then by a
1/4 turn using a wrench but maximum to
about 6 Nm.)*

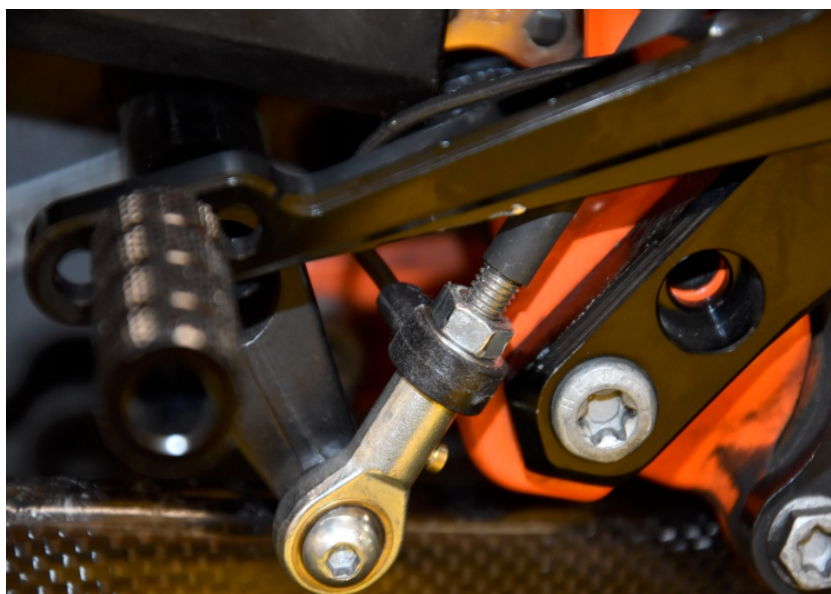

Typical position for the QuickShifter easy.

Secure the unit properly.

