

# QuickShifter easy Supplementary Manual

KTM 690 Enduro/SMC 2014- (iQSE-1 + QSH-P2B)

Remove the seat and the side fairings.




Locate the two ignition coil connectors.  
*(White, 2-pole connectors below the fuel tank.)*



Plug the QSH connectors in-line with the ignition coil connectors.

Connect the QSH Black wire terminal to the battery negative terminal.

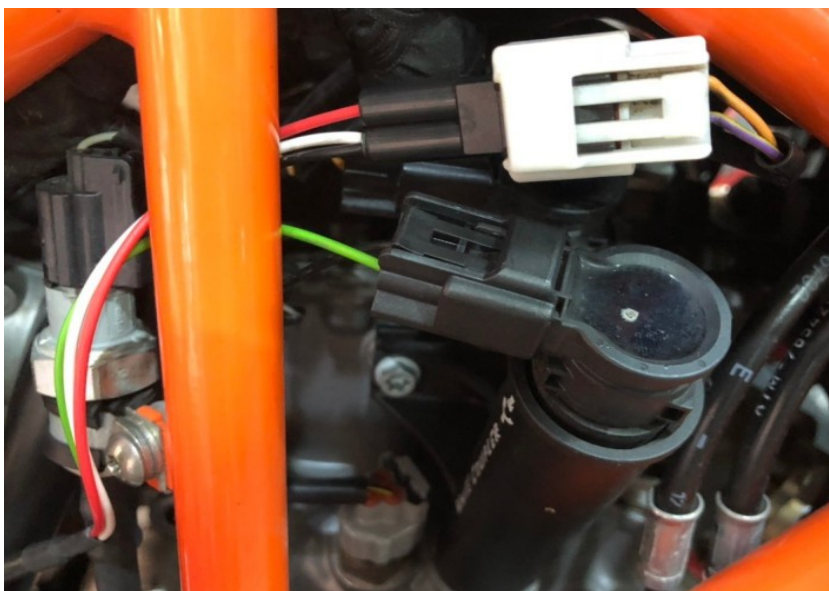

# QuickShifter easy Supplementary Manual



KTM 690 Enduro/SMC 2014- (iQSE-1 + QSH-P2B)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Place the supplied washers at both sides of  
the sensor. Tighten the bolt in this position  
by about 6 Nm. If you do not have torque  
wrench, tighten the bolt until the shift arm  
is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

