


Ducati Diavel 2011-2013 (iQSE-1 + QSH-P2E)

Remove the seat.

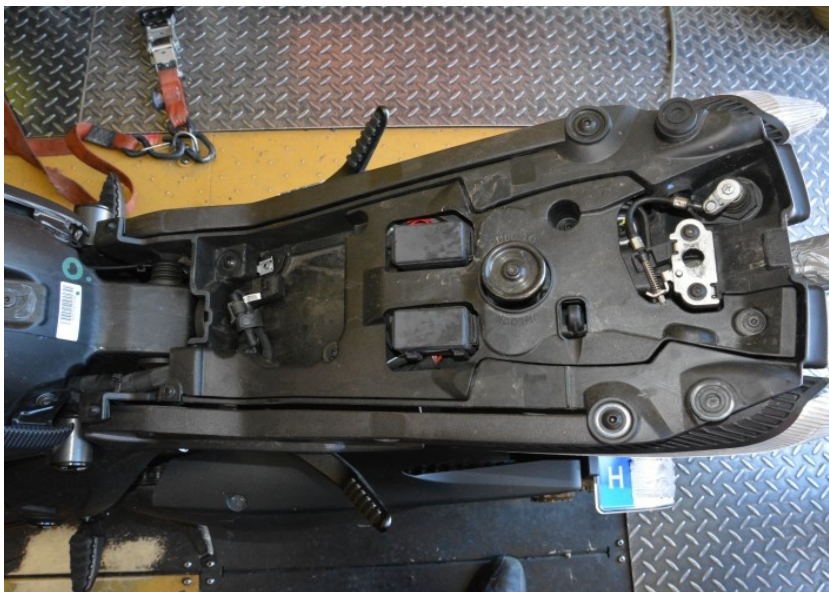

Remove the left and right side cosmetic covers from the fuel tank.



Remove the airbox intake covers from the left and right side.



Ducati Diavel 2011-2013 (iQSE-1 + QSH-P2E)


Remove the center dashboard.



Remove the tank cover.



Remove or lift up the fuel tank.

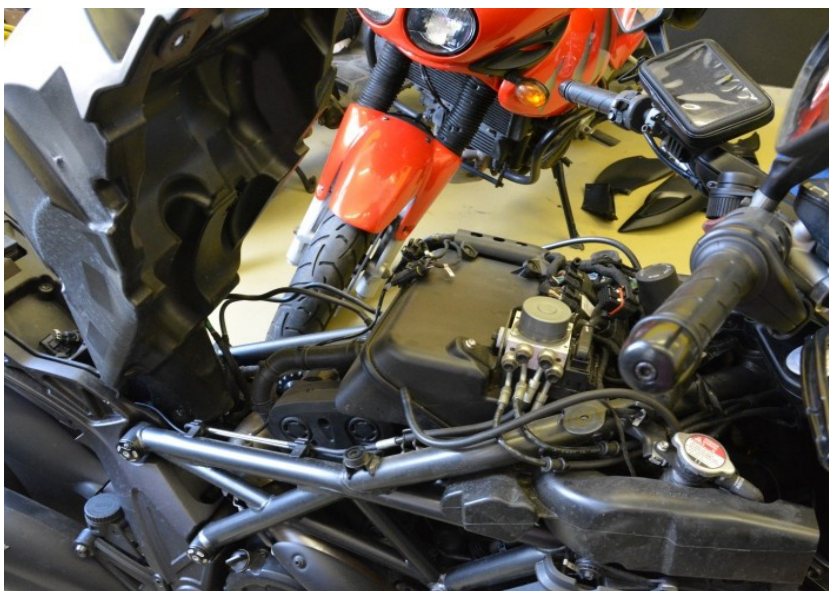

QuickShifter easy Supplementary Manual



Ducati Diavel 2011-2013 (iQSE-1 + QSH-P2E)


Plug the QSH connector in-line with the ignition coil connectors of the front cylinder.

(Black, 3-pole connectors on right the side near the vin number)



Plug the QSH connectors in-line with the ignition coil connectors of the rear cylinder.

(Black, 3-pole connectors on the top of the airbox)

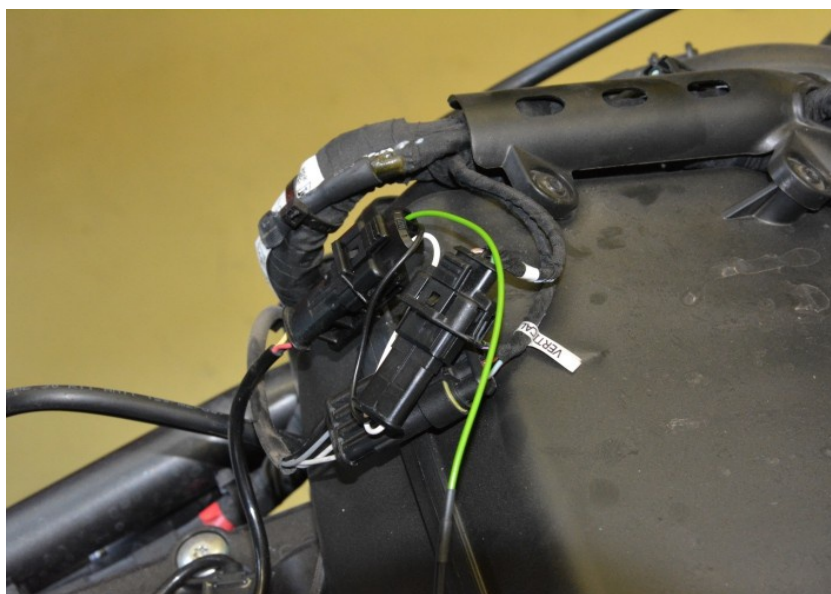

Place the spacer into the shift arm.



Ducati Diavel 2011-2013 (iQSE-1 + QSH-P2E)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the conical washers at the two sides
of the sensor like this: (O). Tighten the bolt
in this position by about 6 Nm. If you do not
have torque wrench, tighten the bolt until
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

