

QuickShifter easy Supplementary Manual



Ducati Hypermotard ABS TC 2013- (iQSE-1 + QSH-P2E)

Secure the bike on a stand.




Remove the seat and the side fairing on the left side.



Plug the QSH connectors in-line with the ignition coil connectors on the vertical cylinder.

(3-pole, black connectors under the seat on the left side)

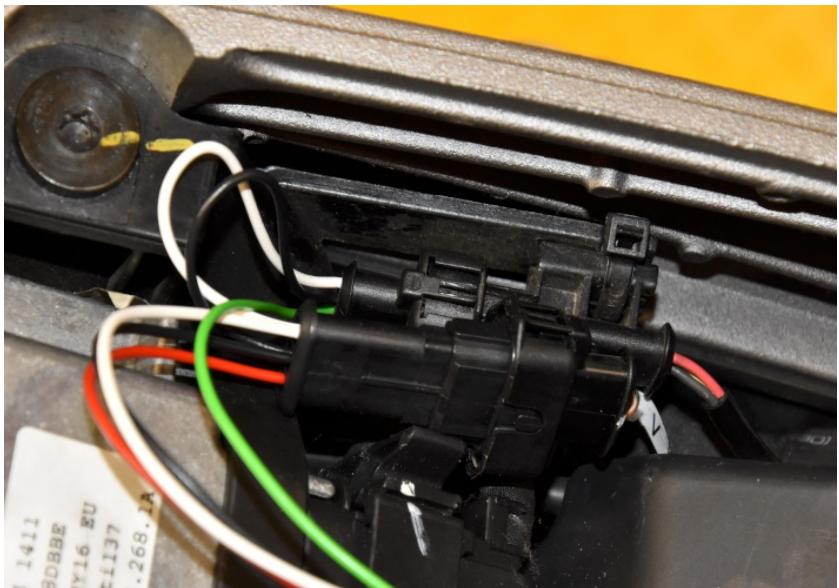

QuickShifter easy

Supplementary Manual



Ducati Hypermotard ABS TC 2013- (iQSE-1 + QSH-P2E)

Plug the QSH connectors in-line with the ignition coil connectors on the horizontal cylinder.

(3-pole, black connectors next to the cylinder on the left side)



Mount the QSE sensor.

*(Place the sensor in the rod as shown.
Tighten the nut by hand fully and then by a
1/4 turn using a wrench but maximum to
about 6 Nm.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

