

Ducati Hyperstrada ABS 2013-2017 (iQSE-1 + QSH-P2E)

Secure the bike on a stand.




Remove the seat and the side fairing on the left side.



Plug the QSH connectors in-line with the ignition coil connectors on the vertical cylinder.

(3-pole, black connectors under the seat on the left side)

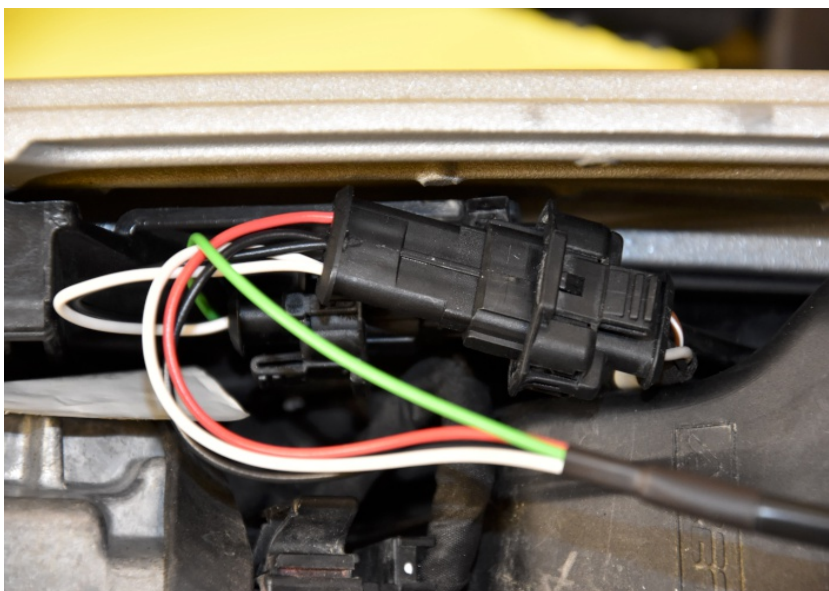

QuickShifter easy Supplementary Manual



Ducati Hyperstrada ABS 2013-2017 (iQSE-1 + QSH-P2E)

Plug the QSH connectors in-line with the ignition coil connectors on the horizontal cylinder.

(3-pole, black connectors next to the cylinder on the left side)



Mount the QSE sensor.

(Place the sensor in the rod as shown.)

Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)



Typical position for the QuickShifter easy.

Secure the unit properly.

