

QuickShifter easy

Supplementary Manual



KTM 790 Adventure ABS TC 2019- (iQSE-1 + QSH-P2E)

Secure the bike on a stand.



Remove the seat.


Remove the plastic covers from the tail fairing.

Remove the plastic covers from the fuel tank.

Remove the fuel tank.



Plug the QSH connectors in-line with the ignition coil connectors.

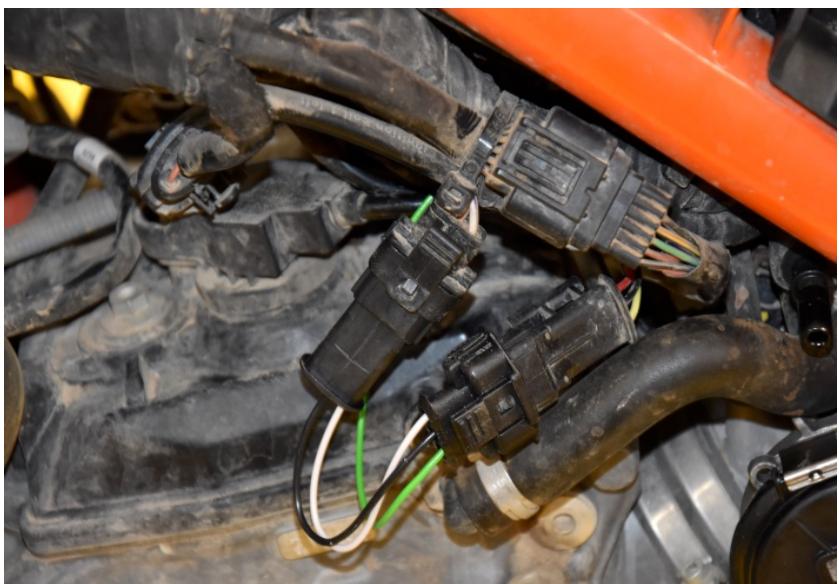

QuickShifter easy


Supplementary Manual



KTM 790 Adventure ABS TC 2019- (iQSE-1 + QSH-P2E)

Mount the QSE sensor.

*(Place the sensor in the rod as shown.
Tighten the nut by hand fully and then by a
1/4 turn using a wrench but maximum to
about 6 Nm.)*

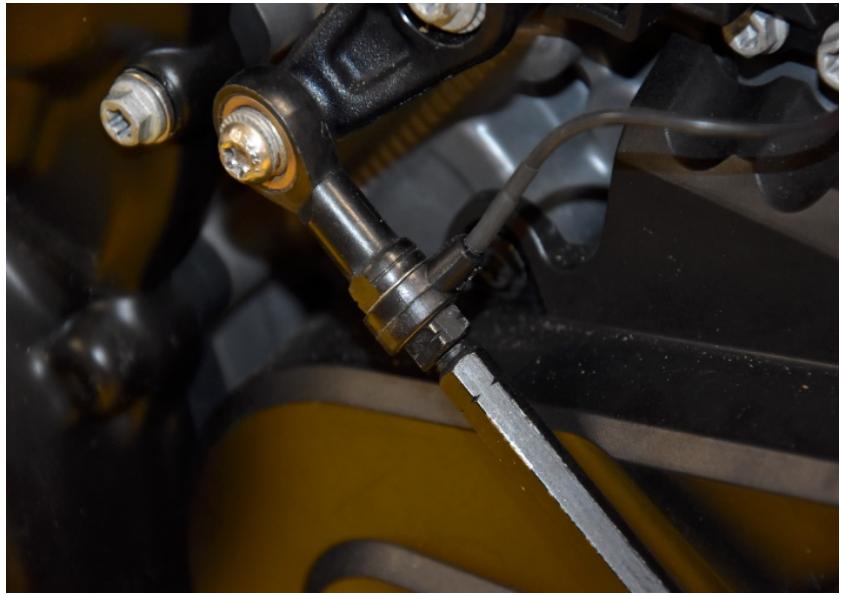

Typical position for the QuickShifter easy.

Secure the unit properly.

