

QuickShifter easy Supplementary Manual

Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Secure the bike on a stand.


Remove the main seat.



Remove the fuel tank.



Cut the White wire of the QSH-P2F harness which goes to the iQSE-1 module unit at the 3p connector.

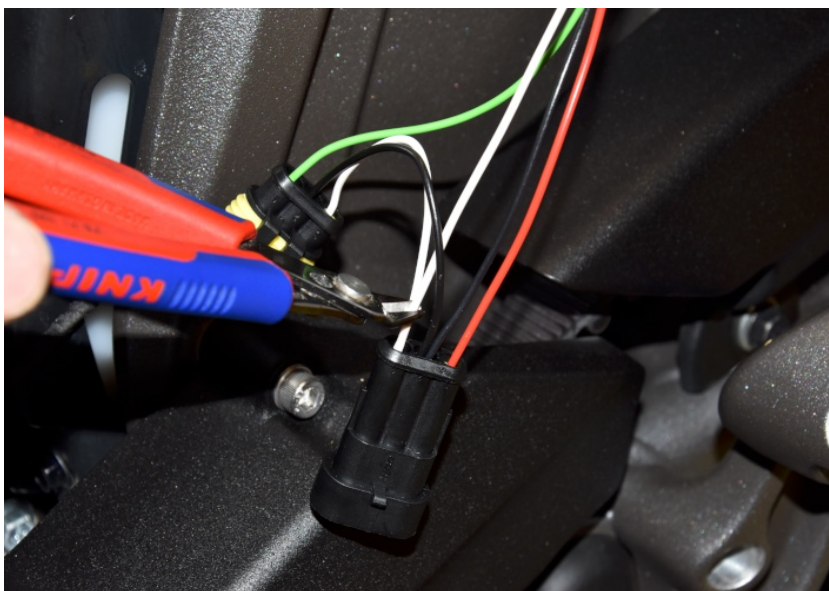


QuickShifter easy Supplementary Manual



Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Isolate the unused White wire end at the plug side with a tape.

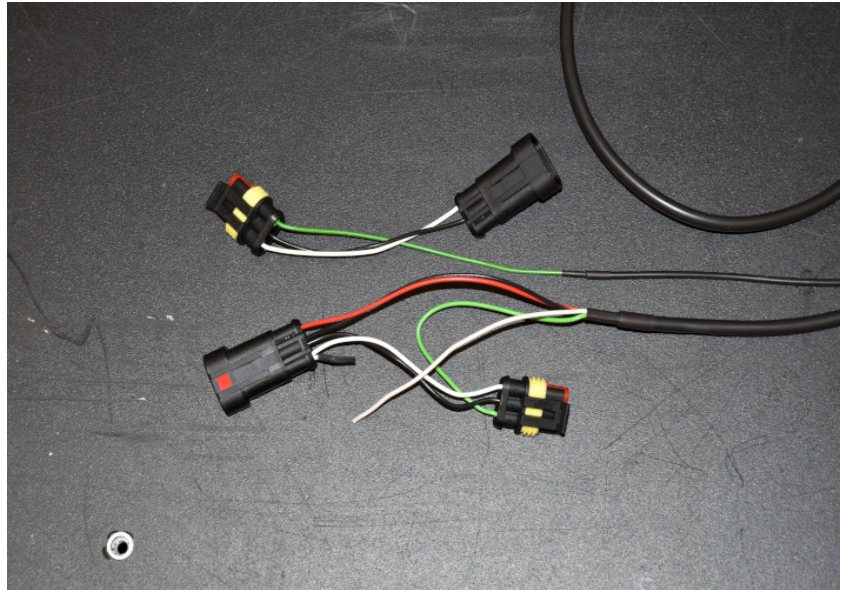


Locate the injector connector below the fuel tank.

(Black, 2-pole connector with Pink/Violet and White/Blue wire.)



Connect the QSH White wire to the injector plug White/Blue wire.

(Use a Scotchlok wire-tap connector.)

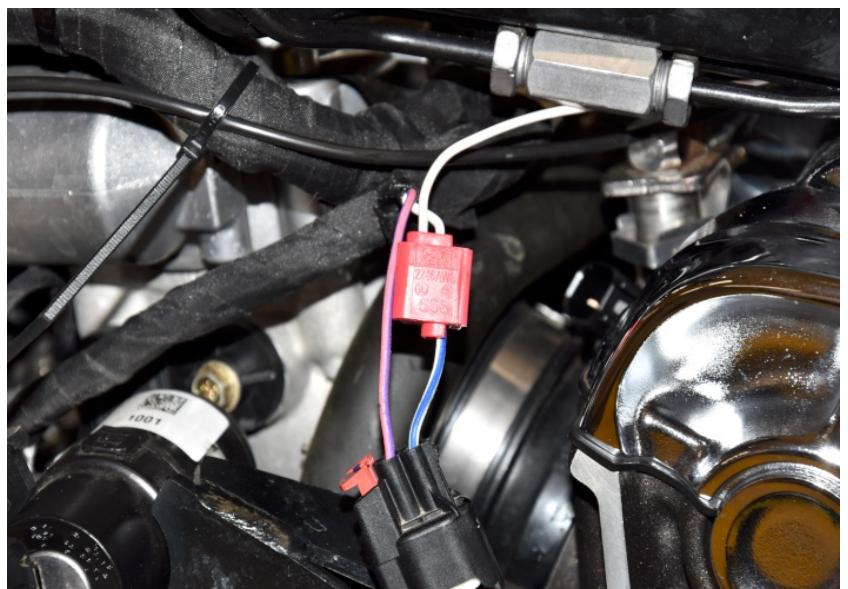

QuickShifter easy Supplementary Manual




Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Locate the ignition coil plugs.

(Black, 3-pole connectors with Red, Black, White wire colours.)



Connect the QSH connectors in-line with the ignition coil plugs.

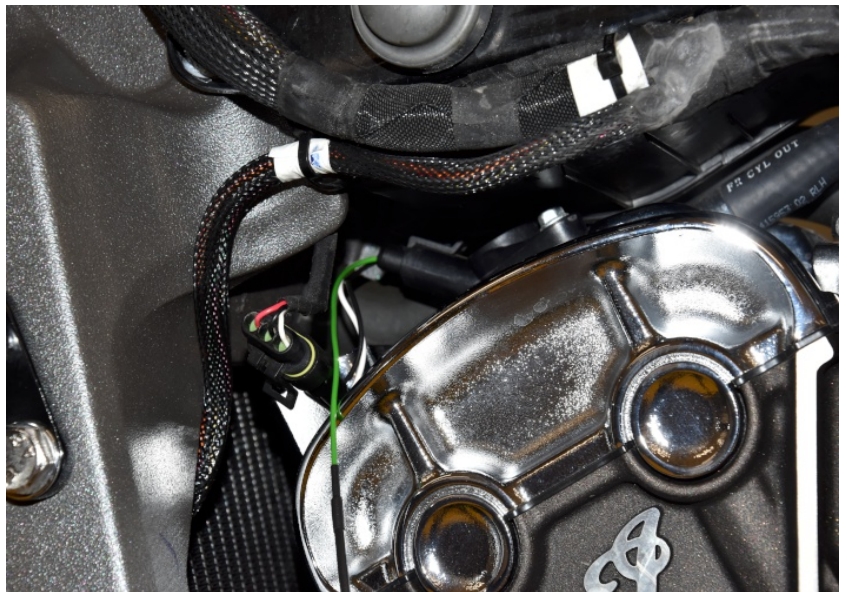

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



QuickShifter easy Supplementary Manual

Indian Scout 1200 2019- (iQSE-1 + QSH-P2F)

Typical position for the QuickShifter easy.

Secure the unit Properly.

