

## Benelli TRK 251 ABS 2018- (iQSE-1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats and the side fairings.

Remove the fuel tank cover and remove the fuel tank.



Locate the ignition coil terminals under the fuel tank on the right side.



# QuickShifter easy Supplementary Manual




## Benelli TRK 251 ABS 2018- (iQSE-1 + QSH-P2T)

Take off the Yellow/White terminal from the coil.


Connect the QSH Green terminal to this coil terminal.

Connect the Yellow/White terminal to the QSH Red wire terminal and secure with tape.

Isolate the unused QSH Green terminal with tape.

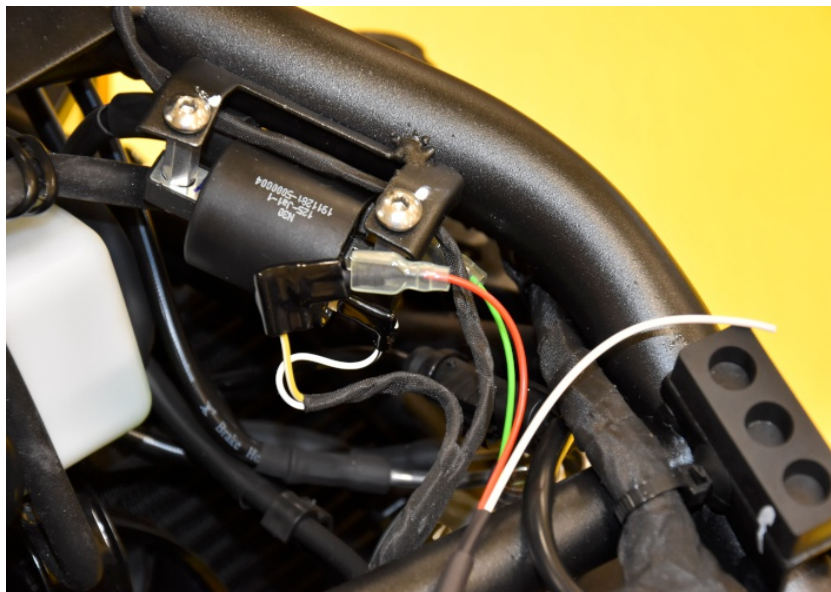

Splice the QSH White wire to the White/Black wire of the coil by using the supplied red wire tap connector.

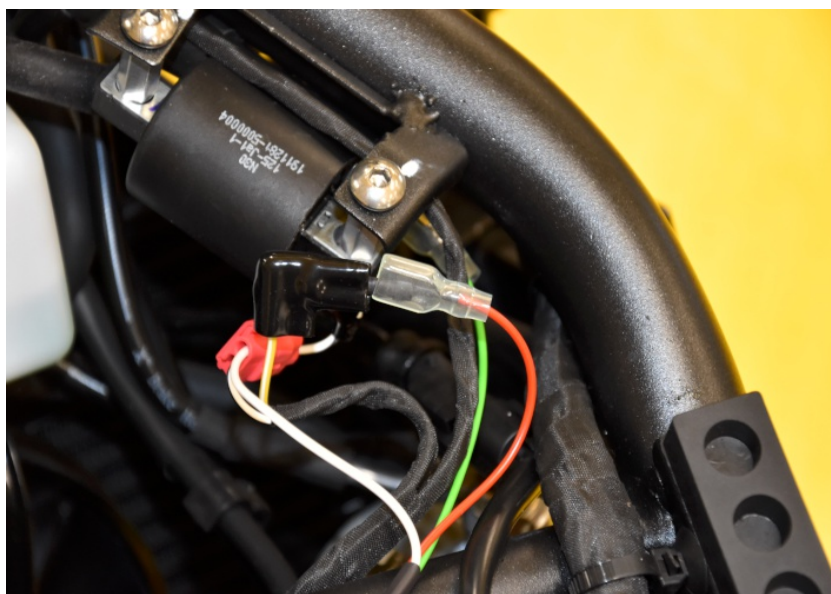

Connect the QSH Black wire terminal to the battery negative terminal.



# QuickShifter easy Supplementary Manual



## Benelli TRK 251 ABS 2018- (iQSE-1 + QSH-P2T)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.  
Tighten the bolt in this position by about 6  
Nm. If you do not have torque wrench,  
tighten the bolt until the shift arm is tight  
on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

