

QuickShifter easy Supplementary Manual

Honda CB1000R ABS 2008- (iQSE-W1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats.

Remove the black plastic cover from the fuel tank.

Remove the fuel tank.



Locate the ignition coil connectors under the fuel tank.



QuickShifter easy Supplementary Manual



Honda CB1000R ABS 2008- (iQSE-W1 + QSH-P2T)

Take off the Black/White terminal from the coil.

Connect the Black/White terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.


Splice the QSH White wire to the Pink wire of the coil by using the supplied red wire tap connector.



Take off the Black/White terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Black/White terminal with tape.

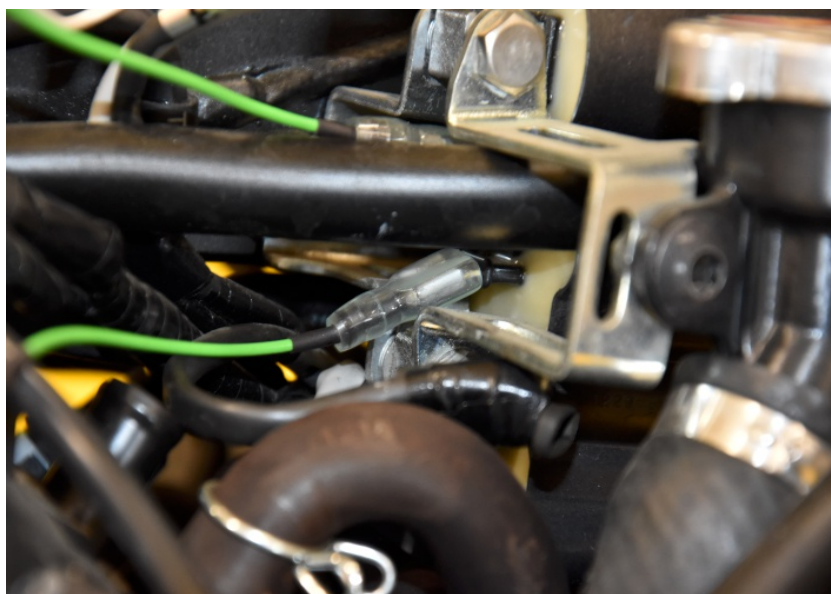

Connect the QSH Black wire terminal to the battery negative terminal.



QuickShifter easy Supplementary Manual



Honda CB1000R ABS 2008- (iQSE-W1 + QSH-P2T)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the supplied washers at both sides of
the sensor. Tighten the bolt in this position
by about 6 Nm. If you do not have a torque
wrench, tighten the bolt until the shift arm
is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

