

QuickShifter easy Supplementary Manual

Honda CB1000R ABS 2008- (iQSE-W1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats.

Remove the black plastic cover from the fuel tank.

Remove the fuel tank.



Locate the ignition coil connectors under the fuel tank.



QuickShifter easy Supplementary Manual



Honda CB1000R ABS 2008- (iQSE-W1 + QSH-P2T)

Take off the Black/White terminal from the coil.

Connect the Black/White terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.


Splice the QSH White wire to the Pink wire of the coil by using the supplied red wire tap connector.



Take off the Black/White terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Black/White terminal with tape.

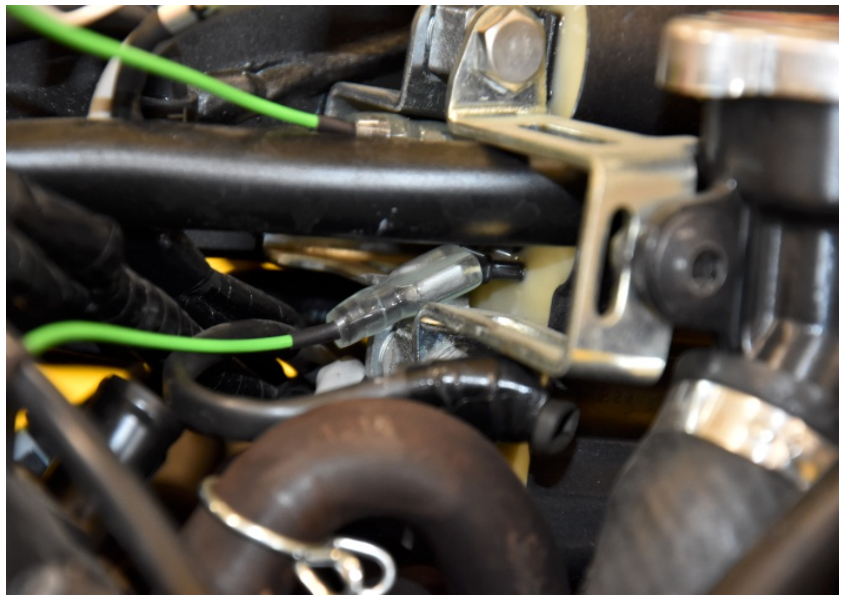

Connect the QSH Black wire terminal to the battery negative terminal.



QuickShifter easy Supplementary Manual



Honda CB1000R ABS 2008- (iQSE-W1 + QSH-P2T)

Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the conical washers at the two sides
of the sensor like this: (O). Tighten the bolt
in this position by about 6 Nm. If you do not
have torque wrench, tighten the bolt until
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

