

QuickShifter easy Supplementary Manual



Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Remove the seats.



Remove the frame covers below the fuel tank.



Lift up or remove the fuel tank.



QuickShifter easy Supplementary Manual



Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to this coil terminal.

Connect the Black/White terminal to the QSH Red wire terminal.



Splice the QSH White wire to the Yellow/Blue wire of the coil by using the supplied red wire tap connector.


(Refer to the QSH-P2T instructions)



Take off the Black/White terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.

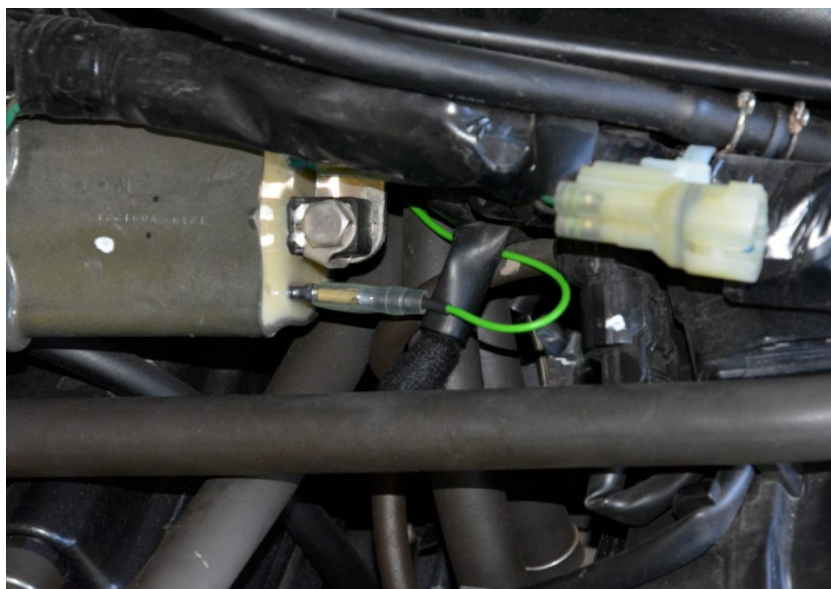

QuickShifter easy Supplementary Manual



Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the chassis ground.



Mount the QSE sensor.

*(Replace the bolt with the one supplied.
Place the conical washers at the two sides
of the sensor like this: (O). Tighten the bolt
in this position by about 6 Nm. If you do not
have torque wrench, tighten the bolt until
the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

