


# QuickShifter easy Supplementary Manual



Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Remove the seats.

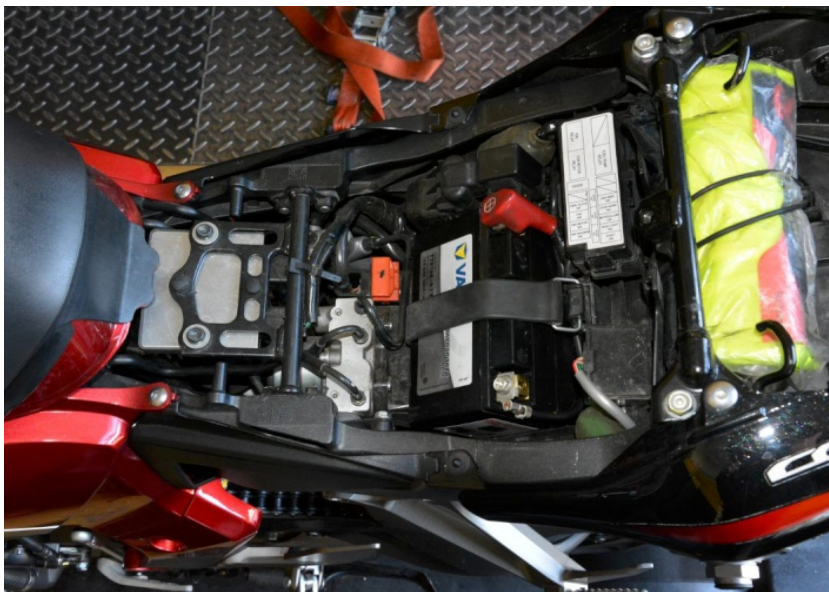

Remove the frame covers below the fuel tank.



Lift up or remove the fuel tank.



# QuickShifter easy Supplementary Manual



## Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to this coil terminal.

Connect the Black/White terminal to the QSH Red wire terminal.



Splice the QSH White wire to the Yellow/Blue wire of the coil by using the supplied red wire tap connector.


*(Refer to the QSH-P2T instructions)*



Take off the Black/White terminal from the 2nd coil.

Connect the QSH Green terminal to this coil terminal.

Isolate the unused Black/White terminal with tape.

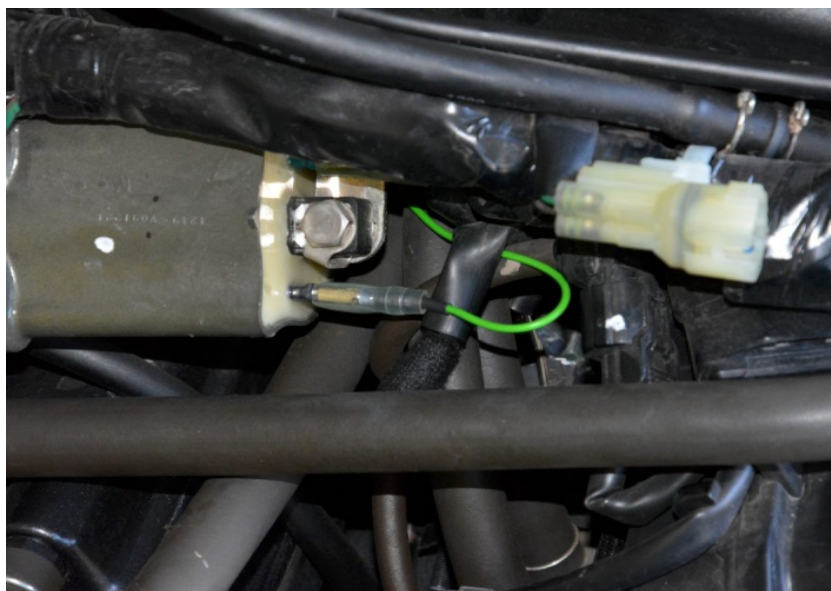




# QuickShifter easy Supplementary Manual



## Honda CB1000R 2008-2017 (iQSE-1 + QSH-P2T)

Connect the QSH Black wire terminal to the battery negative terminal.

*(The picture on the right shows an alternative location, but we recommend using the battery negative terminal)*

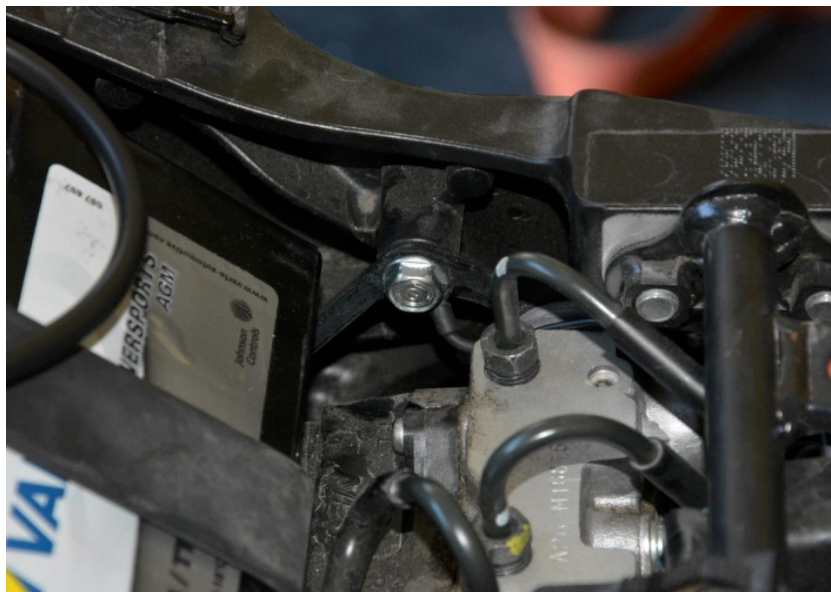

Mount the QSE sensor.

*(Replace the bolt with the one supplied. Place the supplied washers at both sides of the sensor. Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)*



Typical position for the QuickShifter easy.

Secure the unit properly.

