

# QuickShifter easy Supplementary Manual

## Honda CB125R ABS 2018- (iQSE-W1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats.

Remove the fuel tank covers and remove the fuel tank.




Locate the ignition coil connectors under the fuel tank.

Take off the Black/Blue terminal from the coil.

Connect the Black/Blue terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

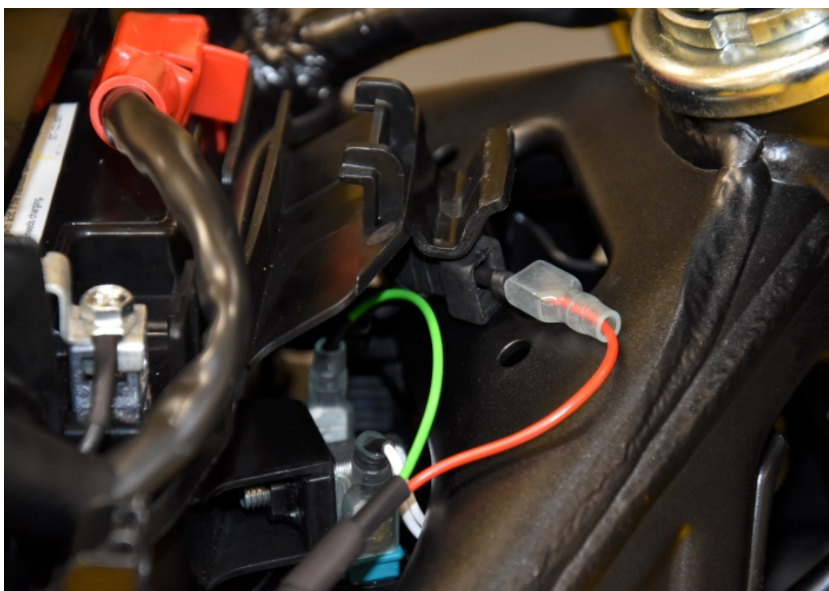


# QuickShifter easy Supplementary Manual



## Honda CB125R ABS 2018- (iQSE-W1 + QSH-P2T)

Splice the QSH White wire to the Pink/Blue wire of the coil by using the supplied red wire tap connector.

Isolate the unused QSH Green wire terminal with tape.

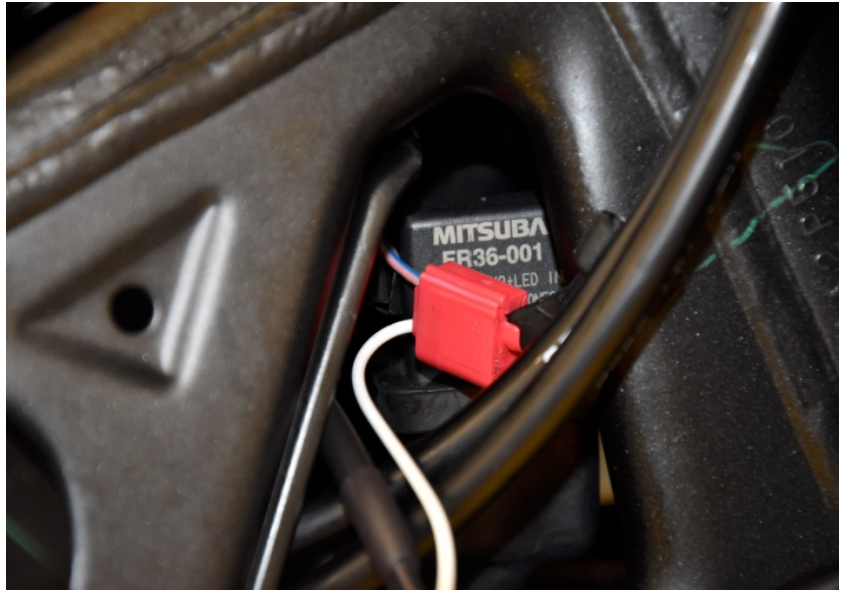

Connect the QSH Black wire terminal to the battery negative terminal.



Mount the QSE sensor.

*(Place the sensor in the rod as shown. Tighten the nut by hand fully and then by a 1/4 turn using a wrench but maximum to about 6 Nm.)*



# QuickShifter easy Supplementary Manual



## Honda CB125R ABS 2018- (iQSE-W1 + QSH-P2T)

Typical position for the QuickShifter easy.

Secure the unit properly.

