

QuickShifter easy Supplementary Manual



Honda CB500F 2013- (iQSE-1 + QSH-P2T)

Secure the bike on a stand.



Remove the seats, side covers and the fuel tank.




Take off the Black/White terminal from one coil.

Connect the QSH Green terminal to the empty coil terminal.

Connect the Black/White terminal to the QSH Red wire terminal and secure with tape.

(Refer to the QSH-P2T instructions)

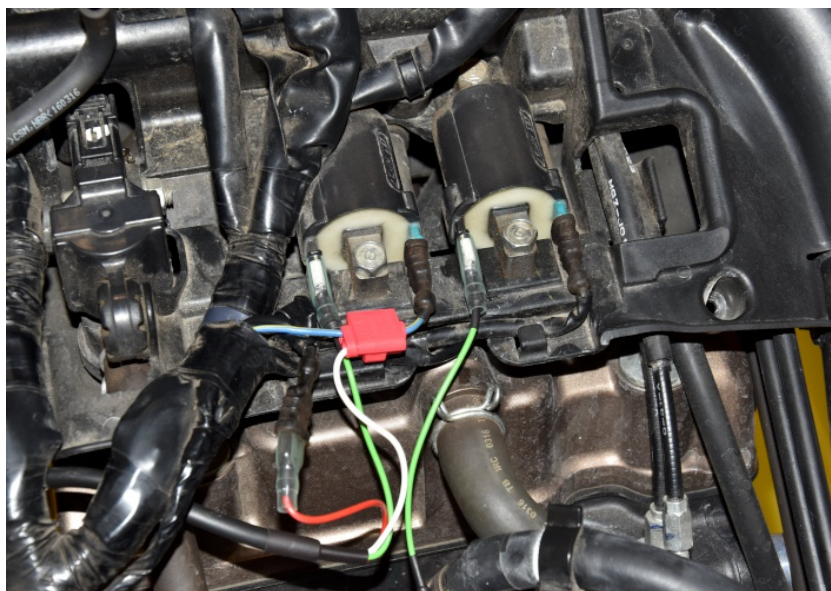

QuickShifter easy Supplementary Manual




Honda CB500F 2013- (iQSE-1 + QSH-P2T)

Take off the Black/White terminal from the 2nd coil.


Connect the QSH Green terminal to the empty coil terminal.

Isolate the unused Black/White terminal with tape.

Splice the QSH White wire to the Blue/Yellow wire of the coil by using the supplied red wire tap connector.

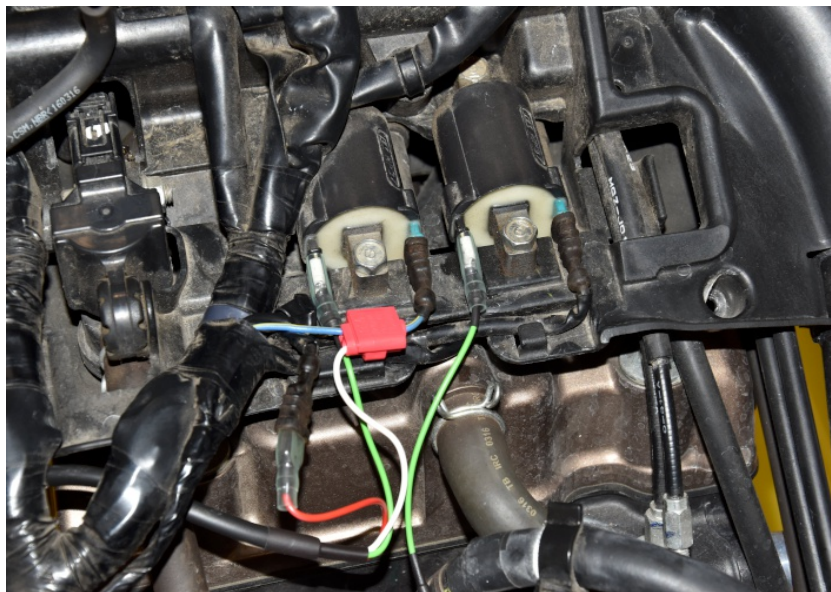

Connect the QSH black wire terminal to the battery negative terminal.

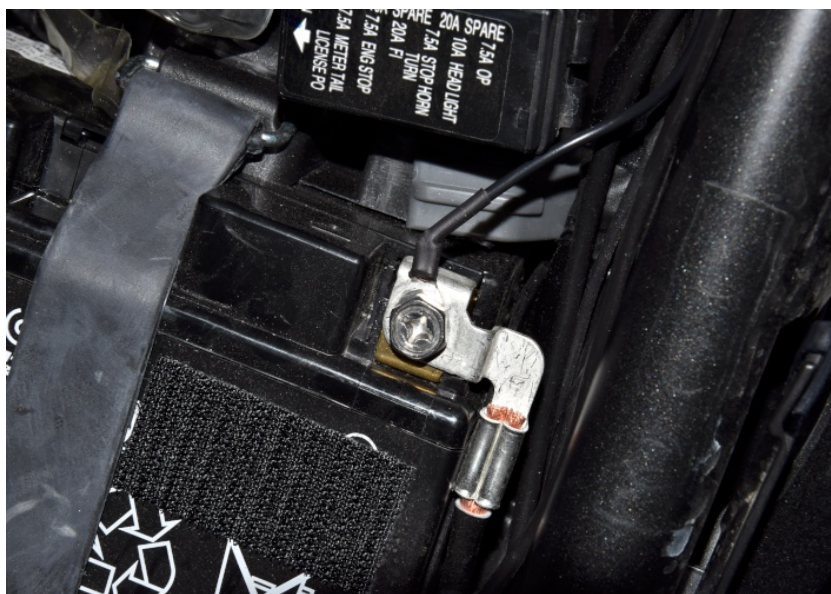

Mount the QSE sensor.

(Replace the bolt with the one supplied. Place the conical washers at the two sides of the sensor like this: (O). Tighten the bolt in this position by about 6 Nm. If you do not have torque wrench, tighten the bolt until the shift arm is tight on the gearbox shaft.)



QuickShifter easy Supplementary Manual



Honda CB500F 2013- (iQSE-1 + QSH-P2T)

Typical position for the QuickShifter easy.

Secure the unit Properly.

