

QuickShifter easy Supplementary Manual

Honda CB500X ABS 2013- (iQSE-W1 + QSH-P2T)

Secure the bike on a stand.




Remove the seat.


Remove the black plastic covers below
the fuel tank.

Remove the side fairings.

Remove the fuel tank.

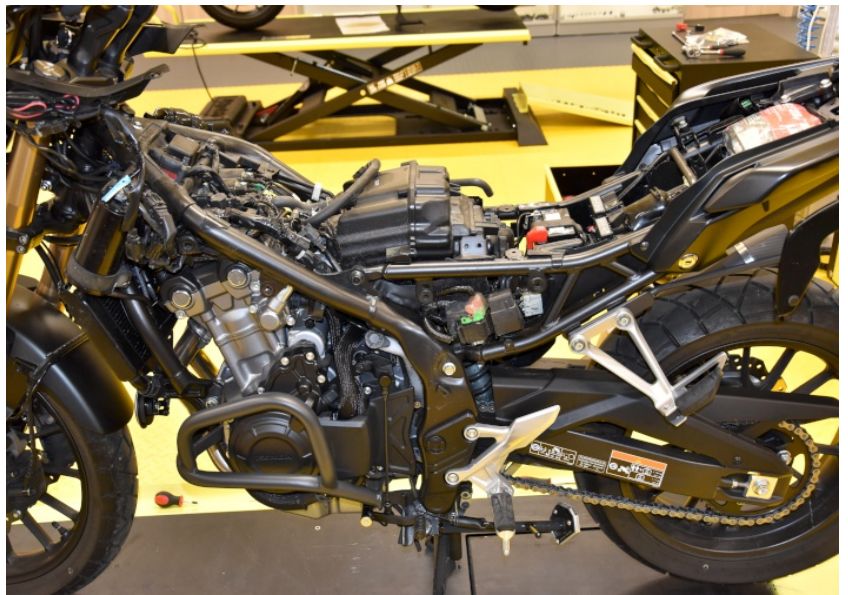

Locate the ignition coil connectors under
the fuel tank.

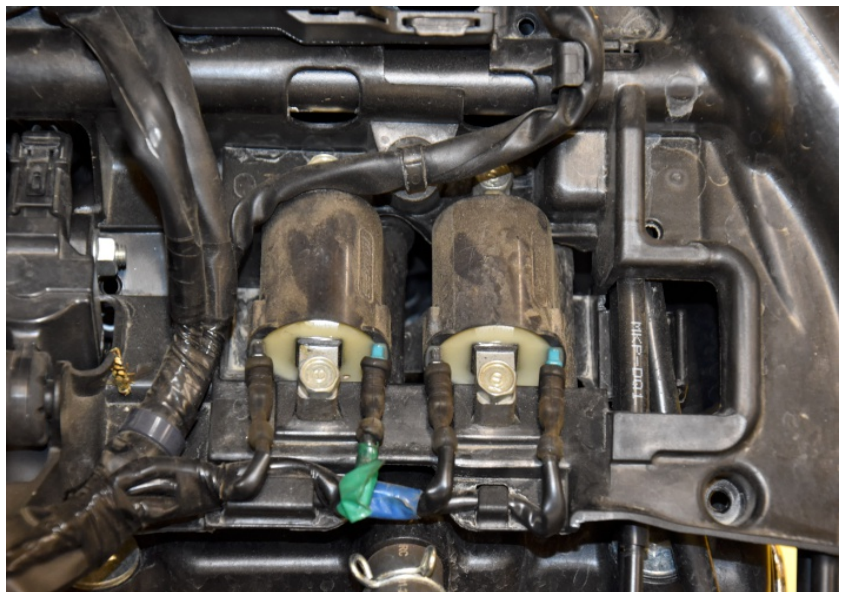

QuickShifter easy Supplementary Manual




Honda CB500X ABS 2013- (iQSE-W1 + QSH-P2T)

Take off the Black/White terminal from the coil.

Connect the Black/White terminal to the QSH Red wire terminal.

Connect the QSH Green terminal to this coil terminal.

Splice the QSH White wire to the Blue/Yellow wire of the coil by using the supplied red wire tap connector.

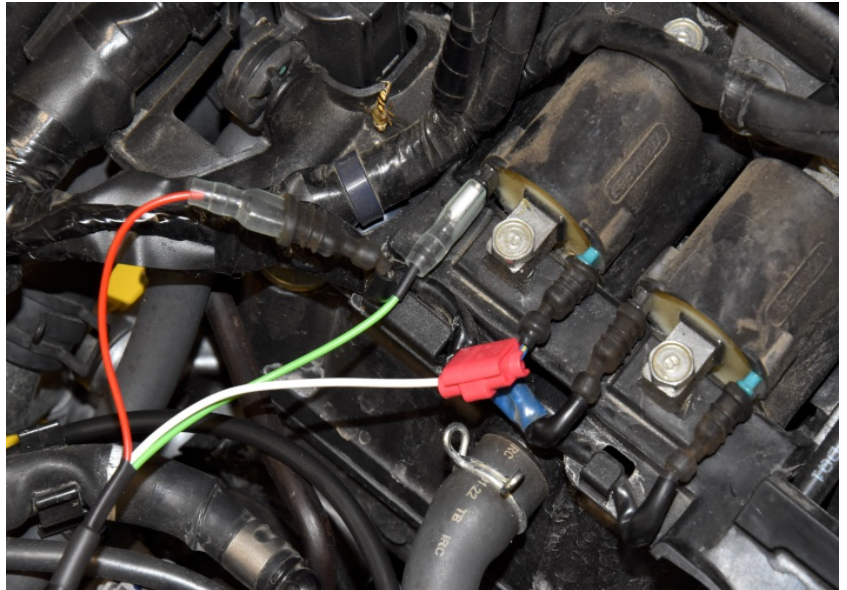

Take off the Black/White terminal from the other ignition coil.

Connect the QSH Green terminal to the empty ignition coil terminal.

Isolate the unused Black/White terminal with tape.



Connect the QSH Black wire terminal to the battery negative terminal.




QuickShifter easy Supplementary Manual



Honda CB500X ABS 2013- (iQSE-W1 + QSH-P2T)

Mount the QSE sensor.

*(Place the sensor in the rod as shown.
Tighten the nut by hand fully and then by a
1/4 turn using a wrench but maximum to
about 6 Nm.)*

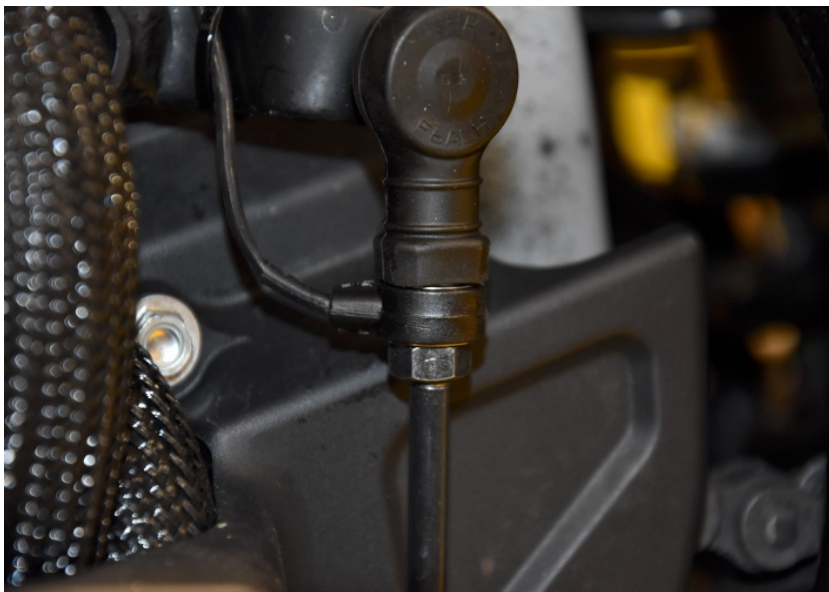

Typical position for the QuickShifter easy.

Secure the unit properly.

